

SANTEC IP Cameras

Models:
SNC-211RSIA
SNC-311FSNF



SNC-211RSIA



SNC-311FSNF

Dear customer,

Thank you for purchasing a high quality SANTEC device.

We recommend that you read this manual thoroughly before operating your new system for the first time. Please follow all instructions and observe the warnings contained in this manual.

Please contact your local dealer or SANTEC directly if you have any questions or if you wish to claim for a service or warranty.

You will find further information on our website:

www.santec-video.com

Imprint:

All rights reserved. This publication may not be reproduced, stored in a retrieval system or transmitted, in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), without the written prior permission of SANTEC BW AG.

No reproduction of any part or excerpts thereof are permitted.

Errors excepted. Specifications are subject to change without notice for quality improvement.

SANTEC is a registered trademark of SANTEC BW AG. All other companies or products mentioned in this publication are trademarks, registered trademarks or brands of the respective company.

© Copyright: SANTEC BW AG
 An der Strusbek 31
 22926 Ahrensburg
 Germany
 www.santec-video.com

Table of contents

Safety precautions.....	6
Safety instructions.....	6
About this user manual.....	8
Items included in the delivery.....	8

PART I: CAMERA DESCRIPTION, TECHNICAL SPECIFICATIONS, INSTALLATION

1. SNC-211RSIA.....	9
1.1 Special features.....	9
1.2 Technical drawing.....	9
1.3 Connections.....	10
1.4 Access.....	11
1.5 Technical specifications.....	12
2. SNC-311FSNF.....	13
2.1 Special features.....	13
2.2 Technical drawing.....	13
2.3 Connections and access.....	14
2.4 Technical specifications.....	15
3. Installation.....	16
4. Web access via ConfigTool.....	17

PART II: CAMERA CONFIGURATION AND CONTROL VIA THE WEB

1. Live view	18
2. PTZ	22
2.1 PTZ control	22
2.2. Calling-up the PTZ functions	23
3. Playback	25
3.1 Preparations	25
3.1.1 Manual recordings/snapshots	25
3.1.2 Alarm-based and schedule based recordings/snapshots	26
3.2 Playback of videos and snapshots	26
4. Setup	29
4.1 Setup → Camera → Conditions	29
4.1.1 Setup → Camera → Conditions → Conditions	29
4.1.2 Setup → Camera → Conditions → Profile management	37
4.2 Setup → Camera → Video	38
4.2.1 Setup → Camera → Video → Video	38
4.2.2 Setup → Camera → Video → Snapshot	39
4.2.3 Setup → Camera → Video → Overlay	40
4.2.4 Setup → Camera → Video → Path	44
4.3 Setup → Camera → Audio	45
4.4 Setup → Network	46
4.4.1 Setup → Network → TCP/IP	46
4.4.2 Setup → Network → Connection	48
4.4.3 Setup → Network → PPPoE	49
4.4.4 Setup → Network → DDNS	49
4.4.5 Setup → Network → IP Filter	51
4.4.6 Setup → Network → SMTP (E-Mail)	52
4.4.7 Setup → Network → UPnP	53
4.4.8 Setup → Network → SNMP	54
4.4.9 Setup → Network → Bonjour	55
4.4.10 Setup → Network → Multicast	55
4.4.11 Setup → Network → 802.1x	56
4.4.12 Setup → Network → QoS	57
4.5 Setup → PTZ	58
4.5.1 Setup → PTZ → Protocol	58
4.5.2 Setup → PTZ → Function	58
4.6 Setup → Peripheral	63
4.7 Setup → Event	64
4.7.1 Setup → Event → Video detect	64
4.7.2 Setup → Event → Abnormality	67

4.8 Setup → Storage.....	68
4.8.1 Setup → Storage→ Schedule.....	68
4.8.2 Setup → Storage→ Destination.....	69
4.8.3 Setup → Storage→ Record control.....	72
4.9 Setup → System.....	73
4.9.1 Setup → System → General.....	73
4.9.2 Setup → System → Account.....	73
4.9.3 Setup → System → Default.....	74
4.9.4 Setup → System → Import/Export.....	74
4.9.5 Setup → System → Auto Maintain.....	74
4.9.6 Setup → System → Upgrade.....	74
4.10 Setup → Information.....	75
4.10.1 Setup → Information → Version.....	75
4.10.2 Setup → Information → Log.....	76
4.10.3 Setup → Information → Online user.....	76
5. Alarm.....	77
6. Setup Assistance.....	78
7 Logout.....	79

Safety precautions

Caution



Description of symbols



Danger: This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



Warning: This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CE compliance

This appliance complies with the CE guidelines.

If you require an EC Declaration of Conformity for this device, please send a request to: CE@santec-video.com

Attention:

Any changes or modifications to this appliance which have not been explicitly approved of by the respective regulatory authority, may lead to a prohibition of usage of this appliance.

Important: Legal note



Monitoring, recording and storage of video surveillance data (images, sound), is subject to strict legal regulations. Please respect the Data Privacy Act which applies to your country.

Safety instructions

- Before operating the appliance, please read this manual carefully and retain it for further reference.
- Before cleaning the appliance, it has to be switched off and unplugged from the power outlet. Wipe the appliance with a soft damp cloth.
Do not use harsh cleansers or aerosols for cleaning. The type label may not be replaced.
- Do not use attachments unless recommended by the manufacturer as they may affect the functionality of the appliance and result in the risk of fire, electric shock or injury.
- Never install the appliance in areas exposed to water or other liquids.
- The appliance has to be installed in a safe and stable location according to the instructions of the manufacturer. Care should be used when moving heavy equipment. Quick stops, excessive force, and uneven surfaces may cause the appliance to fall causing serious injury to persons and damage to objects.
- Openings in the appliance, if any, are provided for ventilation to ensure reliable operation of the appliance and to protect it from overheating. These openings must not be covered or blocked. Please make sure that the appliance does not overheat.
- The appliance should only be operated from the type of power source indicated on the marking label. If you are not sure of the type of power supplied at the installation location, please contact your local dealer.
- An appliance which is powered through a polarized plug (a plug with one blade wider than the other) will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug into the outlet, try reversing the plug. Do not defeat the safety purpose of the polarized plug.
- If the appliance is powered through a grounding-type plug, the plug will only fit into a grounding-type power outlet. This is a safety feature. If your outlet does not have the grounding plug receptacle, contact your local electrician.
- Route power cords and cables in a manner to protect them from damage by being walked on or pinched by items placed upon or against them.
- For protection of the appliance during a lightning storm or when it is left unattended and unused for a longer period, unplug the appliance from the wall outlet. Disconnect any antennas or cable systems that may be connected to the appliance. This will prevent damage to the appliance due to lightning or power-line surges.
- Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- Never insert items into the openings of the appliance. They may touch parts under electric current which may cause an electric shock.
- Never pour any liquids over the appliance.
- In case of any operating interruption or a complete operating failure please switch off the appliance and disconnect it from the wall outlet. Never attempt to service or repair the appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- When replacement parts are required, be sure that the service technician uses replacements specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

- Upon completion of any service or repairs to the appliance, ask the service technician to perform safety checks to verify that the appliance is in proper operating condition.
- The appliance should only be installed by qualified service personnel and has to comply with local specifications and regulations.
- Never point the camera at an object with a high degree of luminance. Bright vertical or horizontal lines can result in a distortion (outshine) of the entire image on the monitor. This artifact is not an error but a particularity of semiconductor CCDs when they are directly exposed to a powerful light source.
- If the camera is operated in locations with extremely differing light conditions, the aperture has to be adapted.
- Please respect the local legal regulations on waste if you need to dispose of discarded appliances.



This symbol means that electrical appliances need to be disposed of properly and not simply with unsorted household refuse. Please respect local regulations on waste disposal.



Camera with IR-LEDs:

Please make sure to always keep a distance of > 1m to avoid damages to your health. Never look directly into the IR-LEDs – this may cause eye damages!

About this user manual

This manual aims at assisting the user on how to operate the described cameras.

This manual is subject to rigid quality control. However, no guarantee can be given that mistakes are not present. We reserve the right to make changes to the manual without prior notice.

Before operating the appliance, please read this manual carefully and retain it for further reference.

Verify that all appliance items are included in the delivery. Should items be missing, do not operate the appliance and contact your local dealer.

Never attempt to repair the appliance yourself. This should only be done by qualified service personnel.

Improper handling of the appliance will invalidate the warranty.

Subject to technical changes without prior notice. Errors excepted

Items included in the delivery

1x IP camera
1x CD (ConfigTool)
1x Stencil sticker
1x Mounting set
1x Quick installation guide

Additionally for SNC-211RSIA:

1x Wall bracket (SNCA-WM-4642)
1x Adapter for additional accessories (SNCA-MK-4830)

Part I: Camera description, technical specifications, installation


1. SNC-211RSIA

1.1 Special features

- IP speed dome camera for outdoor applications
- Excellent image quality, even under poor light conditions
- Easy to use thanks to intuitive user interface
- 3x streaming, dual streaming, multicast
- Digital Wide Dynamic Range (DWDR)
- OnePush lens setting
- P2P capable
- 1/2.8" Progressive Scan CMOS Sensor
- 25 fps at 2 MP
- Motorzoom lens
- Integrated IR LEDs with max. 100 m range
- 24 V AC, PoE voltage
- IP-66 classified
- 24 privacy zones
- Micro SD card slot
- Audio input/output
- Including wall bracket and accessory adapter



1.2 Technical drawing

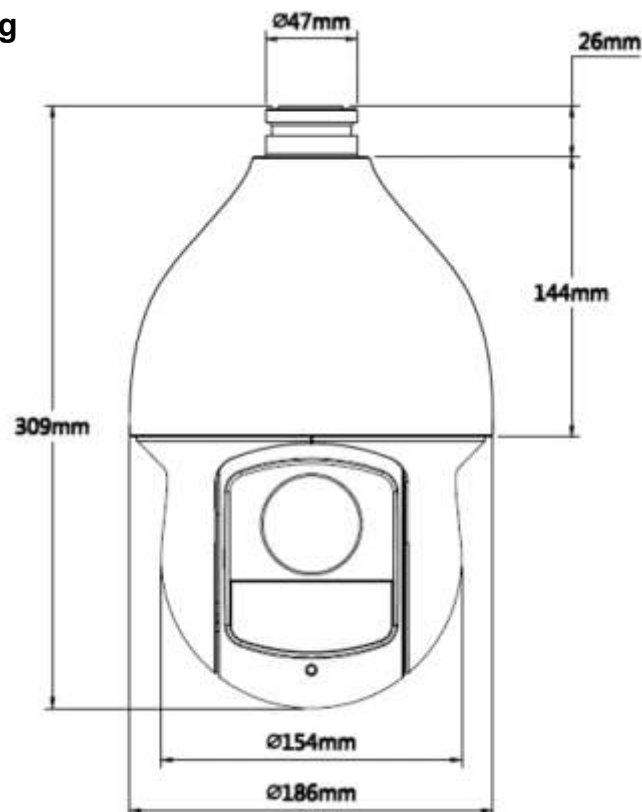

All dimensions in mm. Drawings not true to scale.
Subject to technical changes. Errors excepted.

1.3 Connectors

The camera is equipped with the following connectors:

Power supply:

Red: 24 V AC

Black : 24 V AC

Yellow-green: Earth

Alarm connectors:

Red: Alarm Com

Brown: Alarm Out

White: Alarm In 1


Blue: Alarm In 2

Gray: Audio Out

Black: GND

Green: Audio GND

Purple: Audio In

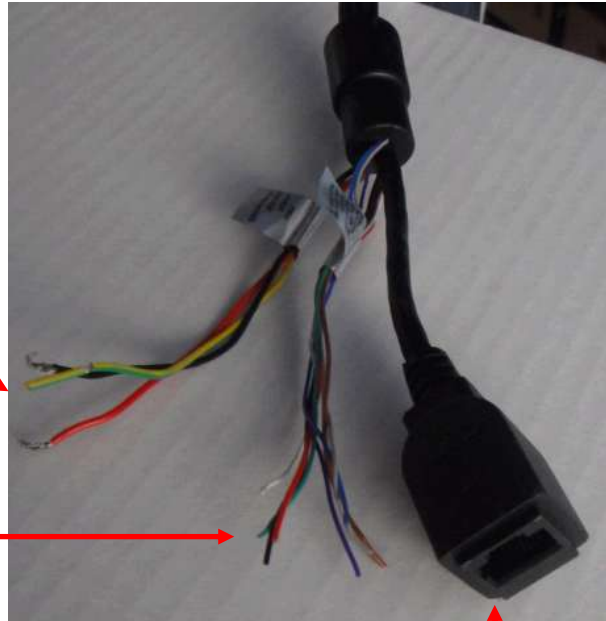

Network

Note:

If the camera's cable length is not long enough for your installation purpose, we recommend to use junction box SNCA-JB-4640 (can be ordered via the SANTEC webshop).


1.4 Access

On the rear of camera SNC-211RSIA, there is a service lid. Screw it off to have access to the reset button and the product label (serial number etc).



Press this button for a few seconds to reset the camera.

If you screw off the entire housing from the camera module, you will have access to the SD card slot.

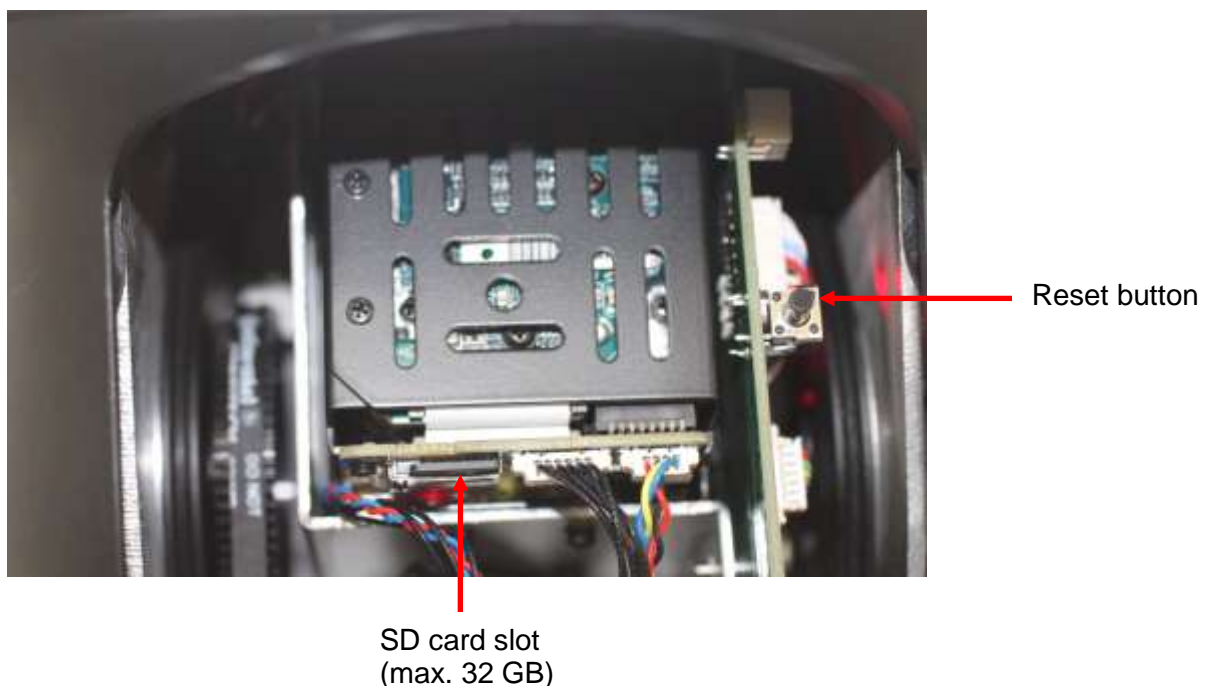

Here you can insert a micro SD card (not included in the deliver), e.g. to store snapshots. (If you also use SANTEC network recorder SNVR-1412P or SNVR-1812P, you can use the ANR (Automatic Network Reproduction) function.)

1.5 Technical specifications

Model	SNC-211RSIA
Camera type	2 MP IP IR speed dome
Installation	Outdoor applications
Video norm	PAL / NTSC
Image sensor	1/2.8" Progressive Scan CMOS
Resolution	2 MP (1920 x 1080)
Video codec (compression)	H.264 / MJPEG
Max. frame rate	2 MP: 25 fps (PAL)
Number of video streams	3 (individually configurable)
Lens	5.5 – 110 mm F1.6 – F3.5 motorzoom lens
Zoom	20x optical, 16x digital
Angle of view (horizontal)	2.6° - 51°
Sensitivity	0.05 (colour), 0.005 (bw)
IR cut filter	Mechanical
IR LEDs	Up to 100m range*
Digital Noise Reduction (DNR)	Ultra 3DNR
Digital Wide Dynamic Range (DWDR)	Multi-level, digital
Rotation radius, Tilt angle	360°, -15°-180° (Auto Flip)
Preset positions, rotation speed	300, 400°/s
Privacy zones	Yes, 24 zones
Switch contacts I/O	2/1
Audio input/output	1/1
Supported protocols	UPNP, BONJOUR, DHCP, FTP, HTTP, HTTPS, SMTP, RTSP, SSL, ONVIF
Classification	IP-66
Vandal-proof	No
Voltage	24 V AC, PoE
Power consumption	23 watt
Operating temperature	-20° to +50° C
Dimensions (D x H)	186 x 309 mm
Weight	3500 g
Certification	CE
Internal storage(slot for micro SD card)	Yes (micro SD card not included)
Recommended network recorders	<ul style="list-style-type: none"> • SANTEC SNVR-1412P (4-channel) • SANTEC SNVR-1812P (8-channel)
Recommended accessories	<ul style="list-style-type: none"> • SNCA-CM-4670: Corner mount adapter • SNCA-PM-4660: Pole mount adapter • SNCA-JB-4640: Junction box

* Note:

The range of the built-in IR-LEDs depends on the location and the surroundings. Strongly absorbent surfaces, e.g. dark, rough structures (floor, lawn or asphalt), may lead to a considerable reduction of the maximum range.

Subject to technical changes without notice. Errors excepted.


2. SNC-311FSNF

2.1 Special features

- IP mini PT dome for outdoor applications
- Excellent image quality, even under poor light conditions
- Easy to use thanks to intuitive user interface
- 1x main and 2x sub stream, dual-streaming, multicast
- Digital Wide Dynamic Range (DWDR)
- OnePush lens setting
- P2P capable
- 1/3" Progressive Scan CMOS Sensor
- 20 fps at 3 MP, 25 fps at 2 MP (PAL)
- Fix lens
- 12 V DC, PoE voltage
- IP-66, IK10 classified
- 24 privacy zones
- Micro SD card slot




2.2 Technical drawing

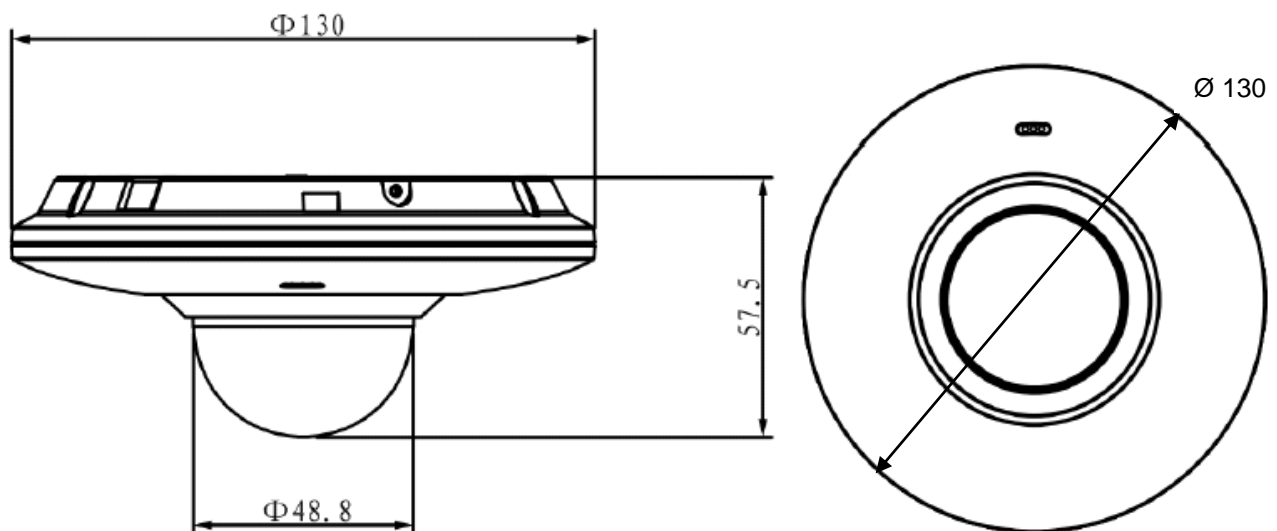

Subject to technical changes without notice. Errors excepted.

2.3 Connectors and access

The camera is equipped with the following connectors:

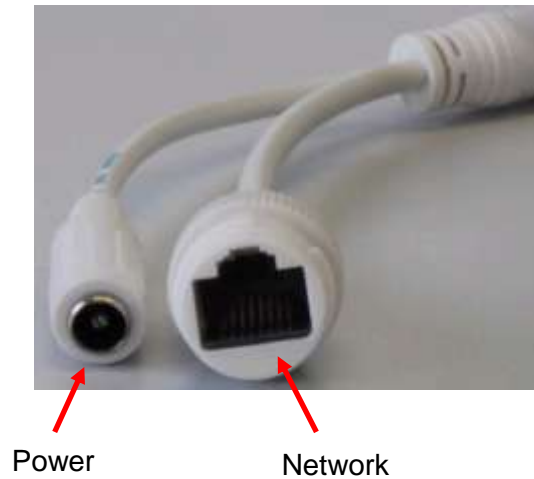

On the bottom of camera SNC-311FSNF, there is service lid. Screw it off to have access to the micro SD card slot.

It is recommended to insert a micro SD card prior to the installation because it will not be accessible anymore once the camera is installed (SD card not included in the delivery).

2.4 Technical specifications

Model	SNC-311FSNF
Camera type	3 MP IP mini PT dome
Installation	Outdoor applications
Video norm	PAL / NTSC
Image sensor	1/3" Progressive Scan CMOS
Resolution	3 MP (2048x1536)
Video codec (compression)	H.264 / MJPEG
Max. frame rate	3 MP: 20 fps 2 MP: 25 fps (PAL) / 30 fps (NTSC)
Number of video streams	3 (1x main, 2x sub)
Lens	3.6 mm, F1.2 Fix lens
Zoom	3x digital
Angle of view (horizontal)	72.5°
Sensitivity	0.01 (colour)
IR cut filter	Mechanical
IR LEDs	No
Digital Noise Reduction (DNR)	3DNR
Digital Wide Dynamic Range (DWDR)	Multi-level, digital
Rotation radius, tilt angle	180°, 0°-90°
Preset positions, rotation speed	25, 100°/s
Privacy zones	Yes, 24 zones
Switch contacts I/O	0/0
Audio input/output	0/0
Supported protocols	UPNP, BONJOUR, DHCP, FTP, HTTP, HTTPS, SMTP, RTSP, SSL, ONVIF
Classification	IP-66
Vandal-proof	Yes, IK10
Voltage	12 V DC, PoE (802.3af)
Power consumption	3 watt
Operating temperature	-20° to +50° C
Dimensions (D x H)	130 x 57.5 mm
Weight	250 g
Certification	CE
Internal storage(slot for micro SD card)	Yes (micro SD card not included)
Recommended network recorders	<ul style="list-style-type: none"> • SANTEC SNVR-1412P (4-channel) • SANTEC SNVR-1812P (8-channel)
Recommended accessories	<ul style="list-style-type: none"> • SNCA-WM-4643: Wall bracket • Sanpower-MS01B: 1-channel PoE power supply • VCA-12V-1.5ASA: Power adapter with plug


Subject to technical changes without notice. Errors excepted.

3. Installation

1. Firmware update:

On our website, we post the most up-to-date firmware version for this camera. Therefore we recommend to always update the camera with the latest firmware version. You will find the firmware here:

www.santec-video.com → Products & Shop → Camera part number → Downloads → Firmware/Software

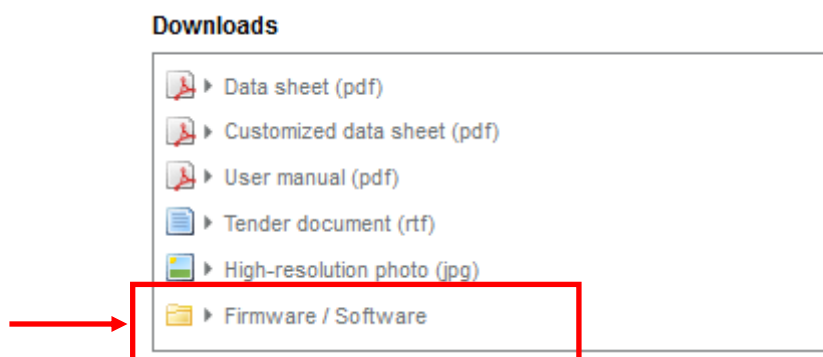

2. Insert SD card:

It is recommended to insert a micro SD card prior to the camera installation.

3. Installation:

- Install the camera in the desired location.
Mount the camera on a solid surface which is capable of carrying the camera weight. Please only use suitable screws to ensure a safe camera mounting.
- *Only for camera SNC-211RSIA:*
If the camera's cable length is not long enough for your installation purpose, we recommend to use junction box SNCA-JB-4640 (can be ordered via the SANTEC webshop).
- Connect the camera via a network cable directly to your computer or a switch/router.
- Then connect the camera to power using a suitable power adapter.

When unmounting the camera, please proceed in the reverse order, i.e. disconnect the camera first from power and then from the network.

Connection via a network recorder:

As mentioned above, you can access the camera directly via the web by connecting it to a router or your computer.

It is also possible to connect the camera to a network recorder and then access it via the web. In this case, however, you access the recorder interface and not the camera interface. Depending on the type of connected recorder, you can make some camera settings here, too. The scope of available camera settings may vary depending on the used recorder.

Note:

Due to the various camera setting options available at different recorder models, the focus of this user manual is to describe the web access to the camera directly and not via a recorder. Please refer to the respective recorder user manual to learn more about its camera setting options.

4. Web access via ConfigTool

Once you have connected the camera to your computer/router, please install the „BW IP ConfigTool“ (configuration tool) on your computer which you will find on the supplied CD.


Notes:

- When you use the ConfigTool for the first time, you will be prompted to install the plugin. Please accept the plugin installation.
- The latest version of the ConfigTools can be downloaded in the SANTEC webshop in the product section of the respective camera model (www.santec-video.com).

Start the ConfigTool and click on „Refresh“.

All IP devices in this network will be found automatically and listed here with their IP address.



Click the Explorer symbol . Your standard web browser (e.g. Internet Explorer) will be opened automatically.

Alternatively, you may also enter the camera's IP address manually in the address field of your web browser, e.g. <http://10.1.1.52>

The web login window is displayed:



Factory default login:

Username: admin
Password: 9999

You are now logged in and you will be able to see the live view of the camera.

Note:


It is highly recommended to change the default user name and password here (see chapter 4.9.2):

Setup → System → Account

Part II: Camera configuration and control via the web

Once you have connected the camera and accessed it using the web browser (ConfigTool), the live view of the camera along with the configuration menu and some setting options are displayed.

1. Live-view

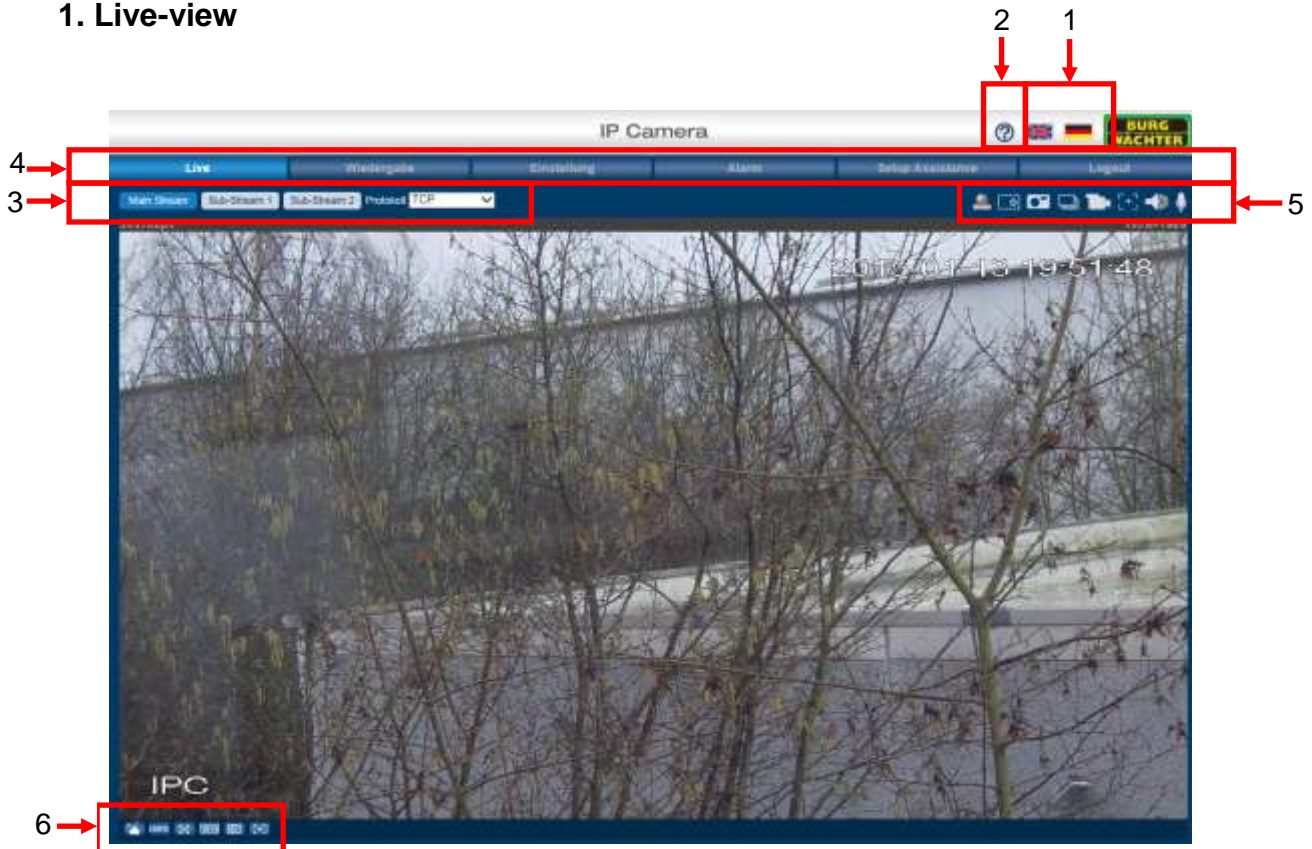

1. Language setting:
You can set the language to German or English. Click on the flag to switch languages immediately.
Alternatively, you may also change the language here (see chapter 4.9.1):
Setup → System → General
2. Question mark (help):
If you click on the questions mark, a help window pops up giving you further explanations about the current site. I.e. when you are on the live site, the help window gives explanations about this site. If you are on the setup site, the help window gives explanations about the setup, and so on.
3. Encoding / streaming settings:
Here you can set the Main Stream, Sub-Stream1 and Sub-Stream2. As protocol, you can select TCP, UDP or Multicast.

4. Configuration menu:





- Live
- PTZ (*only available for camera model SNC-311FSNF*)
- Playback
- Setup
- Alarm
- Setup Assistance
- Logout




Each menu topic will be further explained in the following chapters.

5. Function fields:









Note:

Depending on the used camera model, the following function fields may vary and may not be available for all camera models.

Symbol	Description
	<p><i>Only available for camera model SNC-211RSIA:</i></p> <p>Click on the pencil symbol to draw a line in the video image to mark a certain area.</p> <p>If you click on the little arrow next to the pencil, additional pencil colours (green, blue, red) are available.</p>
	<p>Digital zoom:</p> <p>Click on this symbol. It turns blue when activated.</p> <p>Click again to deactivate it (will turn white). Alternatively, you may right-click with the mouse to deactivate the zoom.</p> <p>Zoom options:</p> <ul style="list-style-type: none"> • Click the zoom symbol. Move the mouse into the live image and use the mouse wheel to zoom in and out. • Click the zoom symbol. Left-click and hold to draw an area in the live image (red frame) which you wish to zoom. Use Drag & Drop to move the selected area. Use the mouse wheel to further zoom in/out.
	<p>Snapshot:</p> <p>Click this symbol to make a snapshot of the current image. This snapshot will be stored at the path which you have defined here (see chapter 4.2.4):</p> <p style="text-align: center;">Setup → Camera → Video → Path</p>
	<p>Triple snapshot:</p> <p>Click this symbol to make 3 snapshots at 1 fps of the current image. These snapshots will be stored at the path which you have defined here (see chapter 4.2.4):</p> <p style="text-align: center;">Setup → Camera → Video → Path</p>

Symbol	Description
	<p>Record: Click on the record symbol. It will turn blue and the recording of the live image starts. Click again to stop the recording (turns white). The recordings will be stored at the path which you have defined here (see chapter 4.2.4): Setup → Camera → Video → Path</p>
	<p>Audio: Click this symbol to activate the sound (audio) during the live image (symbol turns blue). Click again to turn the audio off (symbol turns grey).</p> <p>Setting options for audio can be made here (see chapter 4.3): Setup → Camera → Audio</p> <p>Audio (sound) is only available if:</p> <ul style="list-style-type: none"> • A microphone (not included in the delivery) is connected to the audio input of the camera • Audio function is enabled on your computer (sound card, speaker) • You have been granted audio permission by your administrator
	<p>Talk: By clicking the talk function you can turn it on and off, e.g. if you need to make announcements.</p> <p>Setting options for the microphone can be made here (see chapter 4.3): Setup → Camera → Audio</p> <p>Audio (sound) is only available if:</p> <ul style="list-style-type: none"> • A speaker (not included in the delivery) is connected to the audio output of the camera • Audio function is enabled on your computer (microphone) • You have been granted talk permission by your administrator

6. Display settings:


Symbol	Description
	<p>Image adjustment: Click this symbol to display a small panel for image adjustment options.</p> <div>  Brightness  Hue </div> <p>Use the slide ruler to adjust the video image. Click „Reset“ to reset all items to default values (50). Click again to hide the small display. Further image adjustment options can be found here (see chapter 4.1.1): Setup → Camera → Conditions → Conditions</p>
	<p>Original size: Click this symbol to display the video image in its actual resolution and original width-to-height ratio. Depending on the resolution of your monitor, the video image might be displayed smaller or larger. Click this symbol again to return to the previous view.</p>
	<p>Full screen: Click this symbol to display the video image as full screen. Double-click into the video image or press the ESC key to return to the normal view. Note: Depending on the used monitor, the image might appear distorted.</p>
	<p>Width-to-height ratio: Click this symbol. Left to it, you can choose between „Original“ and „Adaptiv“ (lights-up in yellow). The video image might appear distorted.</p>
	<p>Fluency: Here you can select from „Realtime“, „Normal“ and „Fluency“ (lights-up in yellow). <u>Realtime:</u> The image is displayed in realtime, the latency is as low as possible. The required bandwidth is increased because of low compression. <u>Normal:</u> Default. High compression requires less storage and produces good image quality. It might happen that fast movements are not clearly visible. <u>Fluency:</u> Optimized for fast movement display.</p>
	<p><i>Only available for camera SNC-211RSIA:</i> Click on this symbol to display a small panel which you can use to call-up various PTZ functions. Detailed explanations are available in chapter 2.</p>

2. PTZ

2.1 PTZ control

There is a small panel for PTZ control.

SNC-211RSIA:

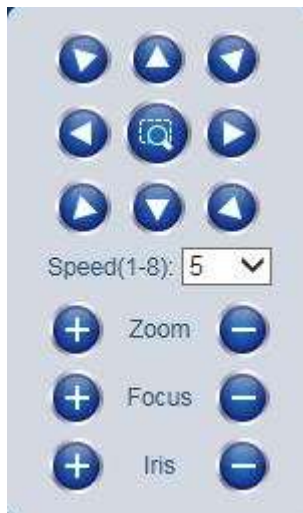

SNC-311FSNF:



PTZ directions:

For PTZ control, please use the 8 directions arrows by clicking on them.

In the middle of the direction arrows, you will find a 3D quick positioning button.

By clicking on this button, the camera image will be displayed as full screen. Press and hold the mouse to draw a box into the image. This area can now be displayed at max. 16x speed. The smaller the area, the higher the speed.

Speed:

PTZ rotation speed (values 1-8; default = 5).

Zoom, Focus, Iris:

Use the plus/minus buttons to adjust the zoom, focus (sharpness) and iris.

2.2 Calling-up the PTZ functions

Using a small extra panel you can call-up the PTZ functions. If you wish to setup/define the PTZ functions, this needs to be done here:

Setup => PTZ => Function (see chapter 4.5.2)

Note:

For camera model SNC-311FSNF, only the „Preset“ function is available.

Scan:



Click on „Start“ to start the scan function.

Preset:



Up to 80 presets are available.

Tour:



Up to 8 tours are available.

Pattern:



Up to 5 patterns are available.


Assistant:



The screenshot shows the 'PTZ Settings' window with the 'Assistant' tab selected. It features a dropdown menu set to 'Assistant', a numeric input field containing '1' with a range indicator '1~255' to its right, and two buttons at the bottom labeled 'AUX On' and 'AUX Off'.

Up to 255 assistants are available.

Go to:

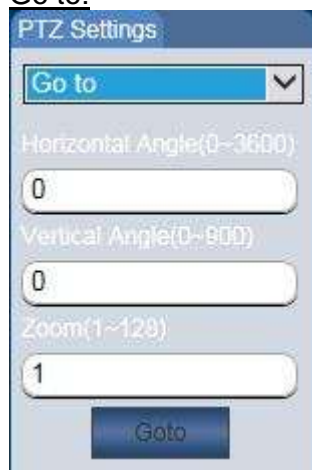

The screenshot shows the 'PTZ Settings' window with the 'Go to' tab selected. It includes a dropdown menu set to 'Go to', three numeric input fields for 'Horizontal Angle(0~3600)' (value 0), 'Vertical Angle(0~900)' (value 0), and 'Zoom(1~128)' (value 1), and a 'Goto' button at the bottom.

Here you can set a horizontal angle (0-3600), a vertical angle (0-900) as well as a zoom area (1-128).

Pan:



The screenshot shows the 'PTZ Settings' window with the 'Pan' tab selected. It features a dropdown menu set to 'Pan' and a 'Start' button with a play icon at the bottom.

Here you can start the pan function.

3. Playback

3.1 Preparations

It is recommended to adjust and correct (if necessary) the date and time setting for the camera. Otherwise the search for recorded data will be difficult. Date and time are to be adjusted here (see chapter 4.9.1):

Setup → System → General → Date & Time

Before making video recordings or snapshots, you have to define the path where to store these data. Here you can differentiate between manual recordings/snapshots and alarm-triggered resp. schedule-triggered recordings/snapshots.

3.1.1 Manual recording/snapshots

Recordings (videos) and snapshots of the live image can be made manually.
In the live view, you can use the following items for manual recordings/snapshots:



Single snapshot



Triple snapshot



Video

These manually created videos/snapshots cannot be stored on the SD card in the camera but only on your computer and the path which you need to define here (see chapter 4.2.4):

Setup → Camera → Video → Path

By default, all recordings are stored on your C: drive.

By clicking on „Browse“ you can change the path.



Videos/snapshots will be stored on your computer under the here defined path, ready for you to be viewed and played back.

3.1.2 Alarm-based and schedule-based recordings/snapshots

Recordings (videos) resp. snapshots which are triggered by an alarm/event or by schedule, are not automatically stored to your computer (in contrast to manual recordings/snapshot) but there are several storage paths available (see chapter 4.8.2):

Setup → Storage → Destination

3.2 Playback of videos and snapshots

Using the playback menu, you cannot playback manually recorded videos/snapshots because they are stored locally on your computer.

This means that the playback menu of the camera only displays videos/snapshots which have been triggered by an alarm or by schedule.

In the playback menu you can select:

- File type:
Video (file will be saved as MP4 or AVI) or snapshot (file will be saved as JPG or BMP).
- Data Source:
Default: SD card

The **calendar** highlights those days in colour where recordings (video or snapshot) are available. Click on the coloured day.



In the **time bar**, recordings for this day are colour-coded at the respective time or duration:

- Red: Schedule-based recording
- Yellow: Motion
- Green: Alarm
- Blue: Manual



Only for video playback:

You can adjust the time back to have a more detailed division into hours or minutes:

- 24 hr: 24 hour display
- 2 hr: 2 hour display
- 1 hr: 1 hour display
- 30 min: 30 minute display



Use this button to move from the calendar view to the **list view**. All recordings of this day are listed here.



For longer lists, use the arrows to go to the next page.

Double-click on a recording's start time to display information such as start and end time of the recording as well as file size. Moreover, the colours indicate the type of recording (in the example on the left: yellow = motion recording).

You may also search for recordings/snapshots based on the recording time. In the time field, enter the time (start and end time) and click on the search icon (magnifying glass). In the list, only recordings/snapshots in this time frame are listed.

If you click on the arrow next to a recording, you can download it and store it on your computer. The storage path can be set here (see chapter 4.2.4):
Setup → Camera → Video → Path



Use this button to exit the list view and to return to the calendar view.

Playback of videos:

Use the playback bar on the bottom of the screen to playback a video:



Symbol	Description
	Playback video (regular speed)
	Stop video
	Next frame: Playback frame by frame
	Slow playback: Shows video at slow speed.
	Quick playback: Shows video at high speed.
	Turn the sound on/off.
	Adjustment of volume level.

Playback of snapshots:



Click this symbol to playback a snapshot.

Video cut (clip):

You may cut out sections of interest of the recorded video (video clips).

1. Click on the start time and then on the cut icon. Then enter a start time and click again on the cut symbol.
2. Click on the end time and then on the cut icon. Then enter an end time and click again on the cut symbol.
3. Click on the save icon to store the video clip.

Define the storage path here (see chapter 4.2.4):

Setup → Camera → Video → Path


4. Setup

4.1 Setup → Camera → Condition

4.1.1 Setup → Camera → Condition → Condition

Here you can define various settings for the video image. The settings are effective in the image immediately as soon as they are set.

Setup for camera model SNC-311FSNF:

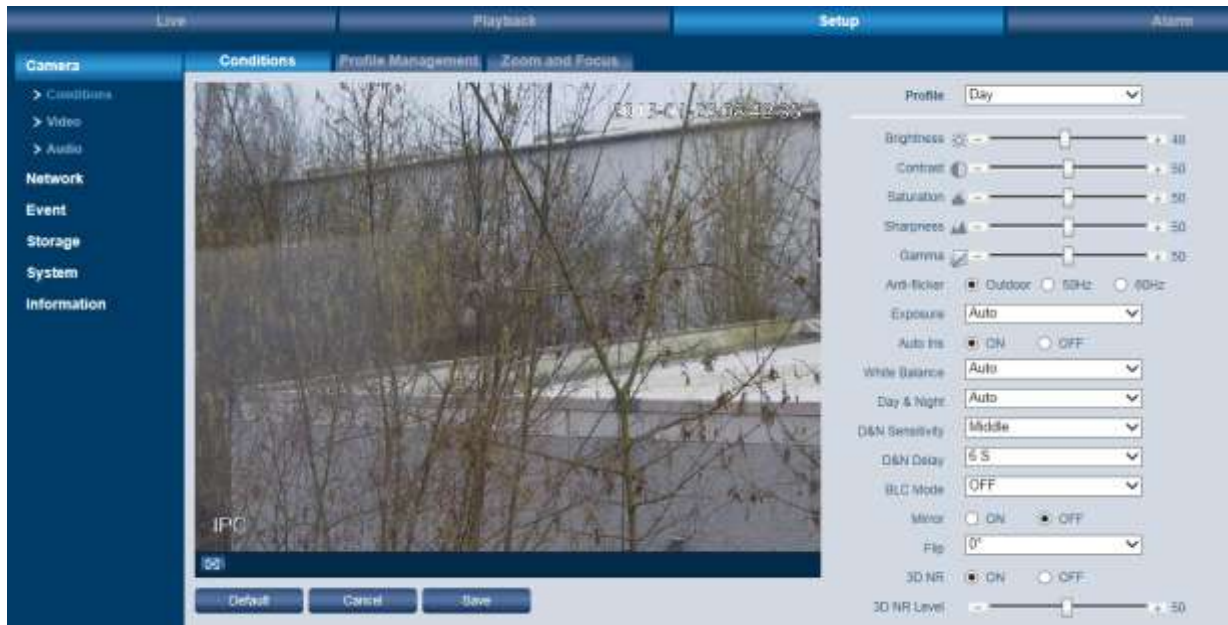

Profile:

You can choose between time profiles „Day“, „Night“ and „Normal“. Each of these profiles can be defined individually.

Brightness, contrast, saturation, sharpness, gamma:

Use the slide ruler to adjust the image. Use the „Default“ button to reset all settings to default value (50).

Anti-flicker:

For Germany, Austria and Switzerland, 50 Hz is commonly used.

60 Hz is mainly used in the USA.

Select the „Outdoor“ (daylight) mode if no artificial light source is available in the surveillance area.

Exposure:

- Auto: The optimum exposure is set automatically.
- Low noise: The camera automatically sets the exposure for minimum noise. The higher the gain value, the lower the noise. The noise level is lower in this mode than in auto mode.
- Low motion blur: The camera sets the exposure for the least possible motion blur. The motion is clearer than in auto mode.
- Manual: You can set the shutter and the gain value manually.

White balance:

- Auto: The camera automatically activates the white balance function.
- Sunny: For sunny (bright light) days.
- Night: For dark days and nights.
- Outdoor: For outdoor applications.
- Customized: Here you can manually set the red and blue gain values.

Day & night:

- Colour: The camera is permanently using the colour mode (day mode), even at night or when it is dark.
- Black & white: The camera is permanently using the black & white mode (night mode), even during the day or when it is bright.
- Auto: The camera automatically switches between colour mode (day mode) and black & white mode (night mode).

D & N sensitivity, D & N delay:

These two functions are only available if you have selected „Auto“ as day & night mode. The sensitivity indicates the level of reaction to changes in brightness (low, middle, high). The longer the delay time, the higher the probability that the camera does not switch several times between colour and black & white mode.

BLC mode:

- Backlight compensation. Here you can select from „Default“ (= automatically) and „Customized“ (= define your own area in the video image).
- WDR: Wide Dynamic Range: Dark areas are brightened up and bright areas are darkened.
- HLC: Highlight compensation. Particularly bright light spots (e.g. caused by car lights) will be reduced in brightness, thus overexposure is reduced. Hence more details become visible. HLC might cause the overall picture to become a bit darker than usual.

Mirror:

If enabled, the video image is mirrored. Wenn Sie diese Funktion aktivieren, wird das Videobild gespiegelt.

Flip:

You can flip (rotate) the video image by 90°, 180° or 270°. If you select 0°, the normal view is restored.



3DNR level:

Here you can reduce the noise level.



Once you have made your setting, please click „Save“. Use „Default“ to reset all settings to default values.

Setup for camera model SNC-211RSIA:

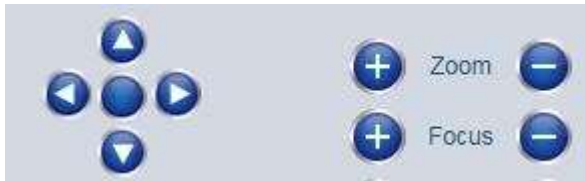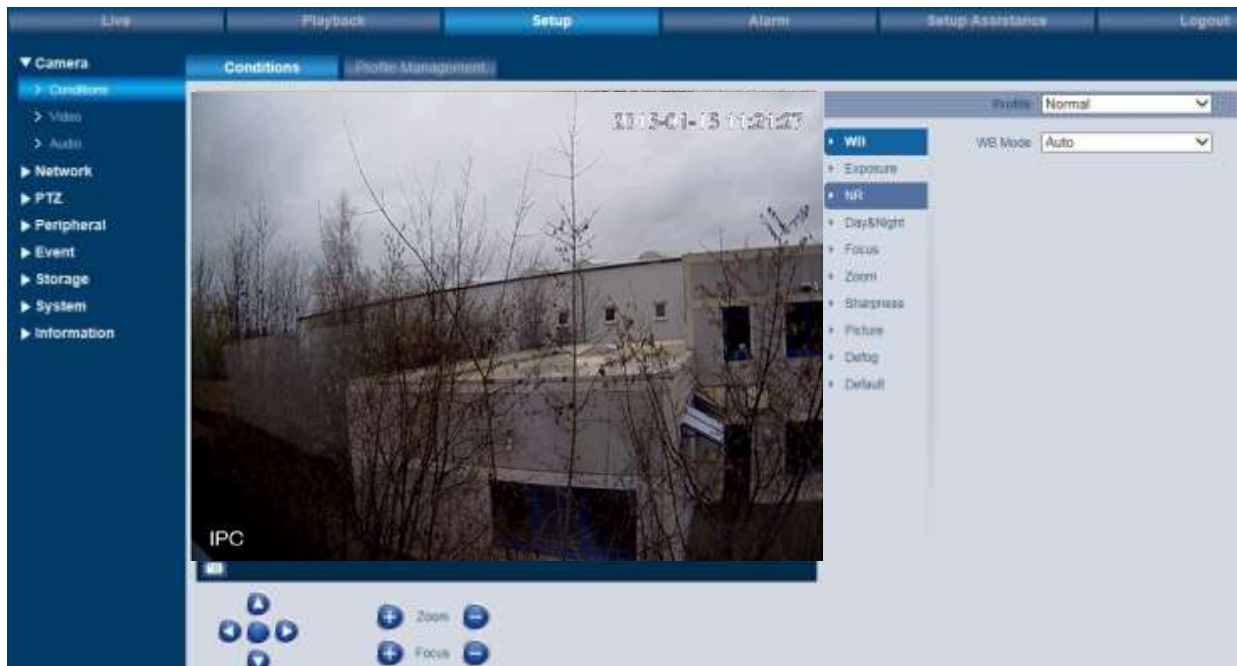

PTZ directions:

For PTZ control, please use the 8 directions arrows by clicking on them.

In the middle of the direction arrows, you will find a 3D quick positioning button. By clicking on this button, the camera image will be displayed as full screen. Press and hold the mouse to draw a box into the image. This area can now be displayed at max. 16x speed. The smaller the area, the higher the speed.

Speed:

PTZ rotation speed (values 1-8; default = 5).

Zoom, Focus, Iris:

Use the plus/minus buttons to adjust the zoom, focus (sharpness) and iris.

Note:

These settings can also be made on the live view page using the PTZ buttons (see chapter 2).

Profile:

Here you can choose from „normal“, „day“ or „night“.

WB (White Balance):

As WB modes, you can select:


- Auto: Automatic white balance.
- Manual: Manual adjustment for red and blue values.
- ATW
- Outdoor
- Indoor
- Outdoor Auto
- Sodium vapor lamp auto
- Sodium vapor lamp

Exposure:



- Exposure:
Auto, shutter priority, iris priority, manual.
- Anti-Flicker:
Outdoor, 50 Hz, 60 Hz.
- Exposure comp.:
Values from 1 to 15 (default = 8).
- Slow exposure:
Values from 1 to 16 (default = 1)
- Max. Auto Gain:
Low, middle, high
- Slow shutter
- Auto SS limit (SS = Slow Shutter)
- AE recovery
- WDR (Wide Dynamic Range)
- HLC (Highlight Compensation)
- BLC (Backlight Compensation)

NR (Noise Reduction):

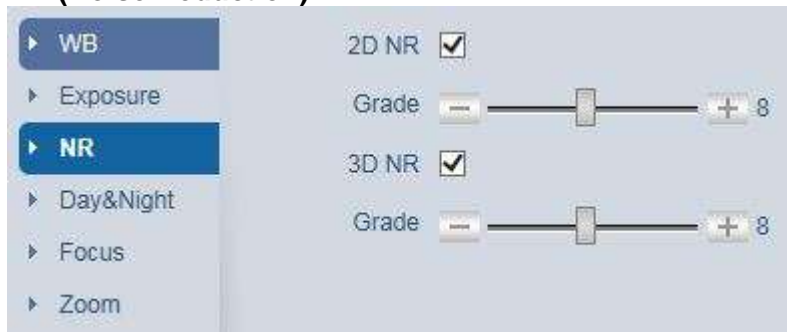

For 2D NR and 3D NR you can adjust the level from 1 to 16 (default = 8).

Day & night:



- Type:
Electronic, mechanical
- Day & night mode:
Auto, colour, black & white, photoresistor
- Sensitivity:
Values from 1 to 8.

Focus:

The screenshot shows the 'Focus' settings menu. On the left is a vertical list of settings: WB, Exposure, NR, Day&Night, Focus (highlighted in blue), and Zoom. On the right, the 'Focus Mode' is set to 'Semi Auto' via a dropdown menu. Below it, 'Focus Limit' is set to '10cm' via a dropdown menu. Then, 'Sensitivity' is set to 'Default' via a dropdown menu. At the bottom, 'IR Correction' has three radio button options: 'Enable', 'Disable', and 'Auto' (which is selected).

- Focus mode:
Auto, Semi Auto, Manual
- Focus Limit:
Auto, 10 cm, 1 m, 2 m, 3 m, 5m
- Sensitivity:
Default, High, Low
- IR correction:
Enable, Disable, Auto

Zoom:

The screenshot shows the 'Zoom' settings menu. On the left is a vertical list of settings: WB, Exposure, NR, Day&Night, Focus, Zoom (highlighted in blue), Sharpness, and Picture. On the right, 'Digital Zoom' is controlled by an unchecked checkbox. Below it, 'Zoom Speed' is controlled by a slider with minus and plus buttons at each end, and the number '8' is displayed to the right of the plus button.


Here you can enable the digital zoom and adjust the zoom speed (1-8).

Sharpness:




- Sharpness:
Adjusts the sharpness of the overall image (1-16).
- Sharpness CNT:
Adjusts the sharpness using the radius (1-16).

Picture:

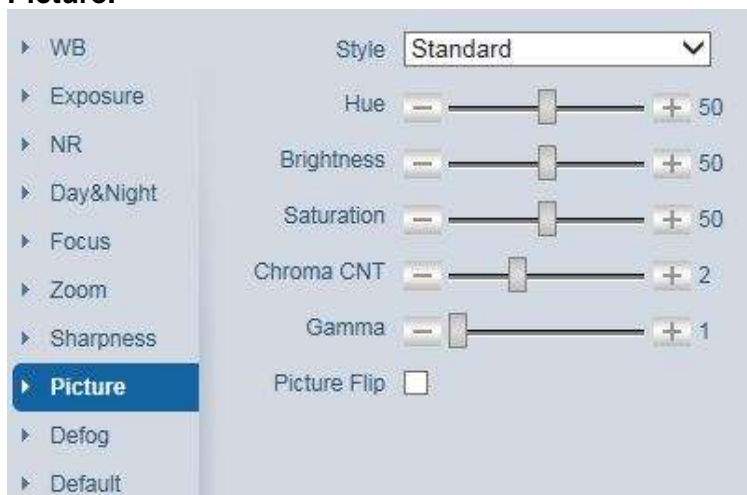

- Style:
Standard, Soft, Natural
- Hue:
Values from 1-100.
- Brightness:
Values from 1-100.
- Saturation:
Values from 1-100.
- Chroma CNT:
Values from 1-4 (Radius)
- Gamma:
Values from 1-16.
- Pictures Flip:
Enable or disable.

Defog:

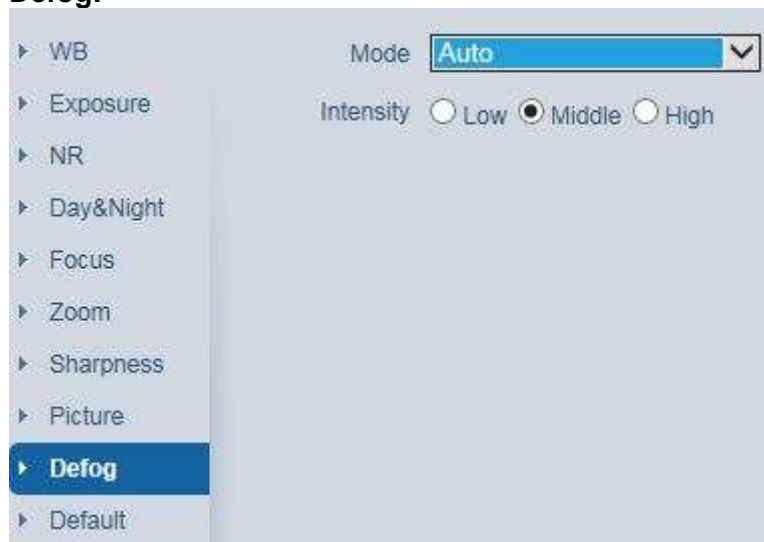

- Mode:
Aus, Auto
- Intensity:
Low, Middle, High

Default:



Here you can select individual or all settings for re-setting them to default values.

4.1.2 Setup → Camera → Conditions → Profile Management

Switching between profiles can be schedule-based or sensor-based.


- Normal
- Full time: Day or night
- Schedule: Use the ruler to define the duration resp. the time.



4.2 Setup → Camera → Video

4.2.1 Setup → Camera → Video → Video

Here you can adjust the settings for the main stream and the sub stream.

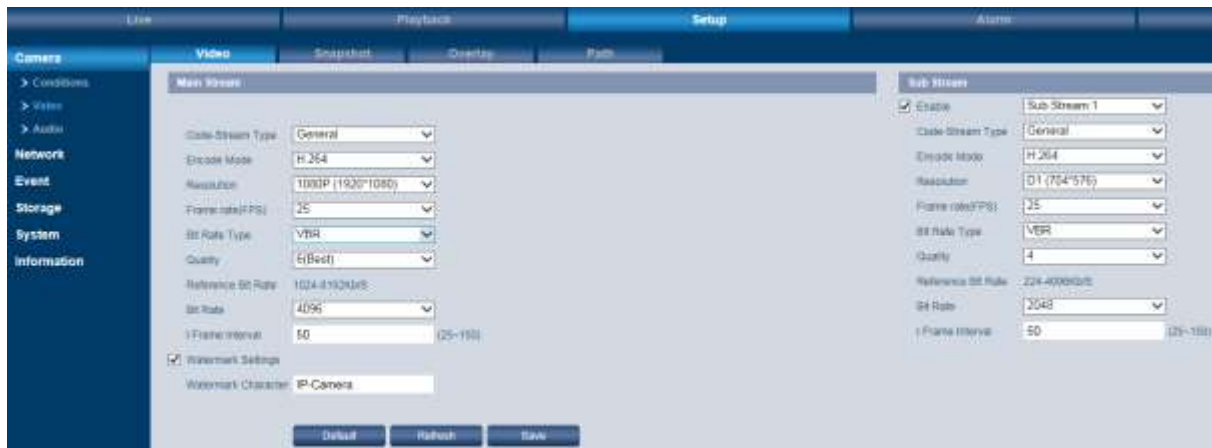

Code stream type:

The camera supports the active control of frame rates, i.e. it allows you to record in different frame rates. You can choose from “General”, “Alarm” and “Motion”. During normal operations (General), you record at low frame rates and during events („Motion“) you record at higher frame rates.

Encode mode:

Here you can select from H.264, H.264H and MJPEG.

Resolution:

Select the resolution which is most appropriate for you.

Frame rate (FPS):

Select the frame rate which is most appropriate for you.

Bit rate type:

Select between CBR and VBR. If you chose MJPEG as encode mode, only CBR is available. For CBR, the bit rate is constant whereas it is variable for VBR (1-6).


I-frame interval:

Here you can set the P frame amount between two I-frames. It is recommended to chose a value which is twice as high as the general frame rate.

Watermark:

If enabled, a watermark is stored in the video image. By including a watermark you can verify if the video has been tempered or not. Max. watermark text length is 128 characters.

4.2.2 Setup → Camera → Video → Snapshot

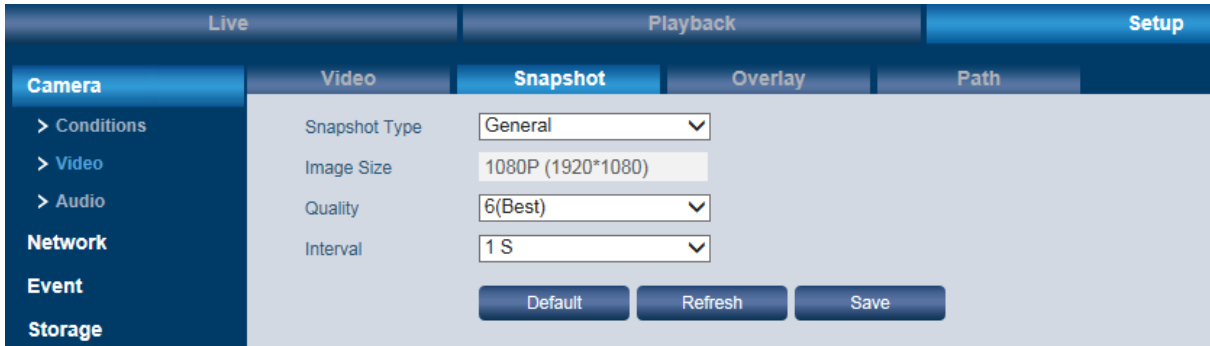

The screenshot shows the 'Setup' tab of a camera configuration interface. The left sidebar contains a tree view with 'Camera' selected, which is expanded to show 'Conditions', 'Video', 'Audio', 'Network', 'Event', and 'Storage'. The 'Video' tab is active, and the 'Snapshot' sub-tab is selected. The main area displays four settings: 'Snapshot Type' (dropdown menu set to 'General'), 'Image Size' (text field showing '1080P (1920*1080)'), 'Quality' (dropdown menu set to '6(Best)'), and 'Interval' (dropdown menu set to '1 S'). At the bottom of the settings are three buttons: 'Default', 'Refresh', and 'Save'.

Here you can define the settings for snapshots.

Snapshot Type:

Here you can select from „General“ and „Event“.

Image Size:

The file size/resolution is identical to the main stream (see chapter 3.2.1).

Quality:

You can choose from 6 quality levels. The higher the value, the more storage capacity is required.

Interval:

Define the interval for the snapshot frequency (1-7 seconds or customized up to 50,000 seconds).


4.2.3 Setup → Camera → Video → Overlay

Here you can define different elements to be displayed or hidden in the video image.

Setup for camera model SNC-311FSNF:

Privacy masking:

Enable the privacy masking function. Use the mouse to draw up to 4 privacy zones into the video image (size and position), i.e. these areas will be covered. Use “Delete” to delete the selected privacy zone or right-click. Use “Remove all” to delete all privacy zones.

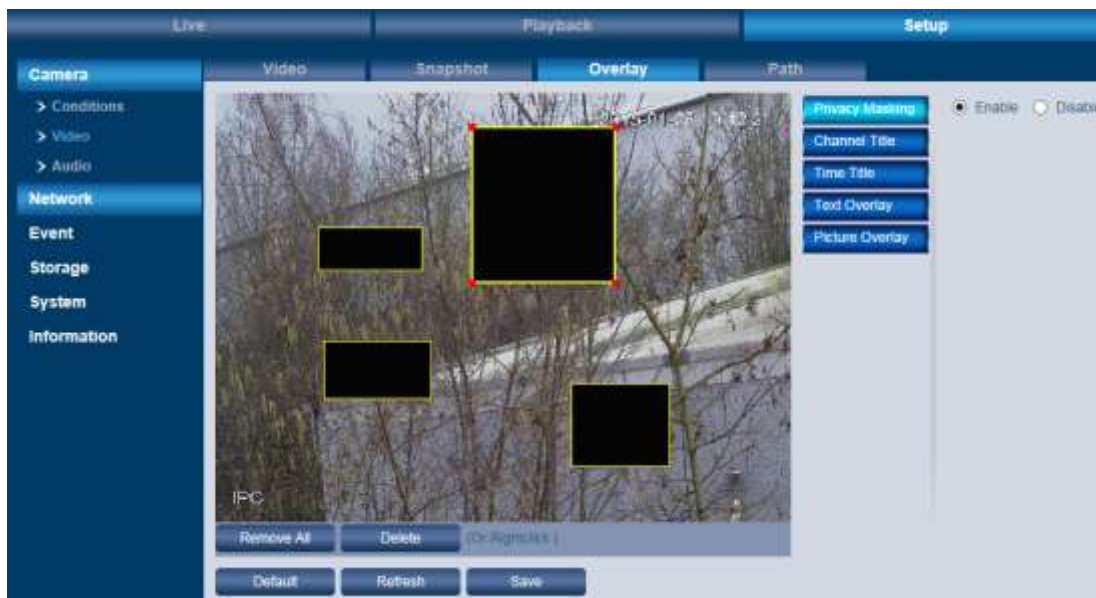

Channel title:

Enable this function and move the yellow „channel title“ box to the desired position in the video image. Then enter a name as „Input channel title“ (max. 15 characters/digits). Click on “Save” to save the channel title.

Note:

If you want to edit the position or text, this is done via the yellow box. The displayed title image cannot be edited directly in the video.



Time title:

Enable this function and move the yellow „time title“ box to the desired position in the video image. If needed, you may also add the day of the week. Finally click on „Save“.

Notes:

- Date and time cannot be edited here, only their position in the video image.
Date/time can be edited here (see chapter 4.9.1)
Setup → System → General → Date & Time
- If you wish to edit the position of the date/time, please use the yellow box.

Text overlay:

Here you can enter a text which should be displayed in the video image. Enable this function and move the yellow text box to the desired position. Enter your text in the „Input text“ field. Finally, click on „Save“.

Notes:

- Picture overlay and text overlay cannot be enabled at the same time.
- If you want to edit the position or text, this is done via the yellow box. The displayed text cannot be edited directly in the video image.

Picture overlay:

You can display one of your own pictures in the video image. Click on “Enable” and move the yellow box to the desired position. Click on “Upload picture” and select the image you wish to upload. Then click on “Save”.


Notes:

- Picture overlay and text overlay cannot be enabled at the same time.
- If you want to edit the picture, this is done via the yellow box.

Setup for camera model SNC-211RSIA:

Privacy masking:

Enable the privacy masking function. Use the mouse to draw up to 24 privacy zones into the video image (size and position), i.e. these areas will be covered.

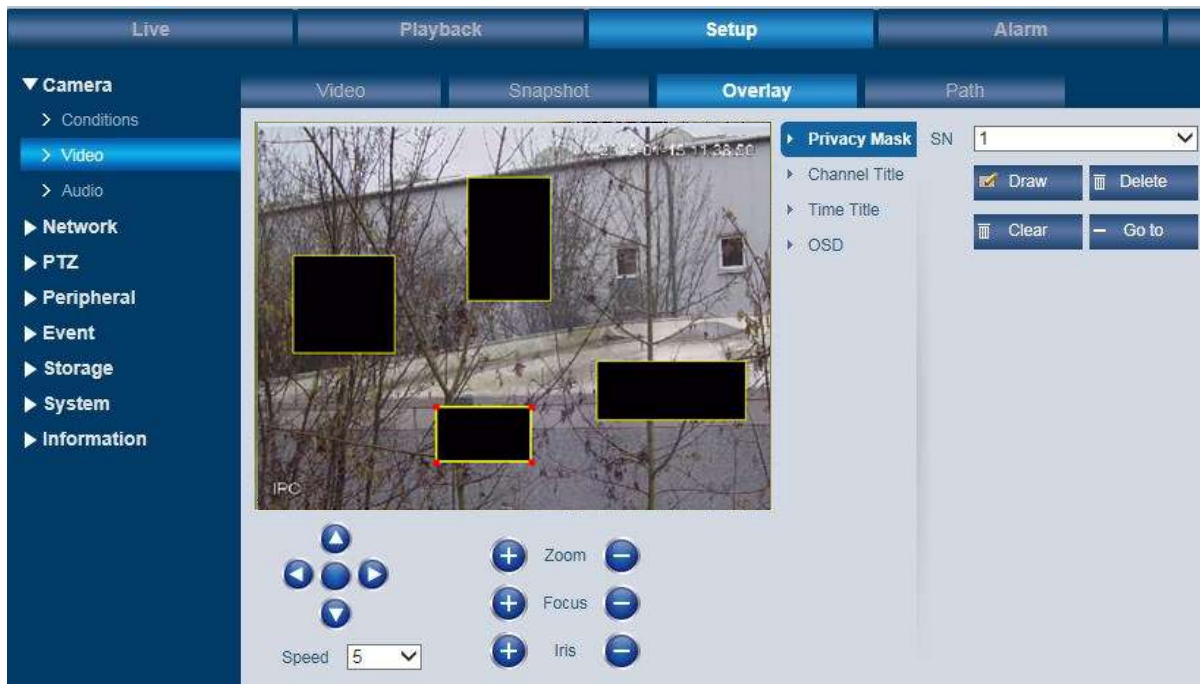


Creation of privacy zones:

- As „SN“ select 1.
- Click on the „Draw“ button.
- Press and hold the mouse and draw a box (privacy zone) into the video image. Use the mouse to change the size and position of the privacy zone.
- In order to create additional privacy zones, go to “SN” and select 2.
- Click on the „Draw“ button.
- Press and hold the mouse and draw a box (privacy zone) into the video image. Use the mouse to change the size and position of the privacy zone.
- and so on.

Deleting privacy zones:

- To delete one specific privacy zone, go to „SN“ and select the respective number. Then click on the “Delete” button.
- To delete all privacy zones, click on the „Clear“ button.

Channel title:

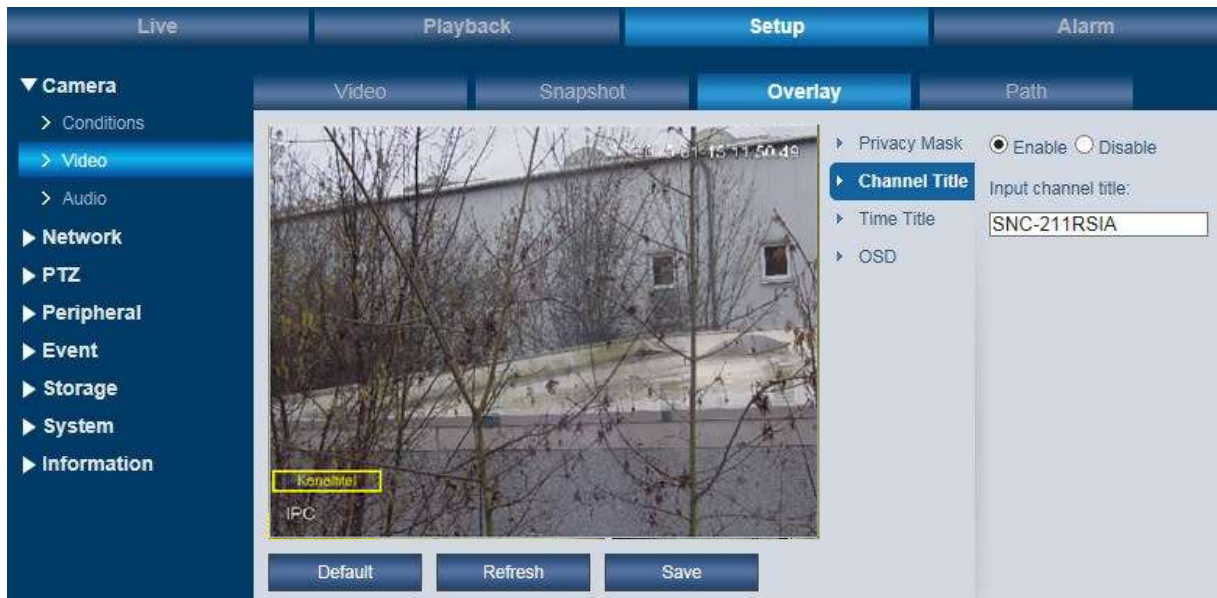

Channel title:

Enable this function and move the yellow „channel title“ box to the desired position in the video image. Then enter a name as „Input channel title“ (max. 15 characters/digits). Click on „Save“ to save the channel title.

Note:

If you want to edit the position or text, this is done via the yellow box. The displayed title image cannot be edited directly in the video.

OSD Info:



Here you can define whether specific information such as temperature, coordinates, etc are to be displayed in the video image.

4.2.4 Setup → Camera → Video → Path

Here you can define the paths for storing snapshots and recordings.

Live		Playback		Setup
Camera	Video	Snapshot	Overlay	Path
<ul style="list-style-type: none"> > Conditions > Video > Audio Network Event Storage System 	Live Snapshot	C:\Users\SFischer\WebDownload\LiveSnapshot		Browse...
	Live Record	C:\Users\SFischer\WebDownload\LiveRecord		Browse...
	Playback Snapshot	C:\Users\SFischer\WebDownload\PlaybackSnapshot		Browse...
	Playback Download	C:\Users\SFischer\WebDownload\PlaybackRecord		Browse...
	Video Clips	C:\Users\SFischer\WebDownload\VideoClips		Browse...
		Default	Save	

By default, videos/snapshots are stored on your C: drive. Click on „Browse“ to change the storage path.

4.3 Setup → Camera → Audio



Preconditions for audio streaming and bi-directional communication (sound, talk) are:

- A microphone/speaker (not included in the delivery) is connected to the audio input/output of the camera.
- Your computer has enabled audio functionality (sound card, speaker, microphone).
- You have been granted audio/talk permission by your administrator.

Sampling frequency:

Sampling frequency supports two modes: 8K or 16K.

Microphone/speaker volume:

Adjust the volume by using the plus/minus buttons or the ruler.

Enable:

Tick the „Enable“ box to activate the audio function for the main stream and/or the sub stream.

Audio format:

Audio recordings support the pcm format. To playback alarms, pcm audio files or wav files can be used.

Preconditions for wav format: 8kHz/16kHz sample rate at 16-bit resolution

Important: Legal note




Monitoring, recording and storage of video surveillance data (images, sound), is subject to strict legal regulations. Please respect the Data Privacy Act which applies to your country.

4.4 Setup → Network

4.4.1 Setup → Network → TCP/IP


TCP/IP:

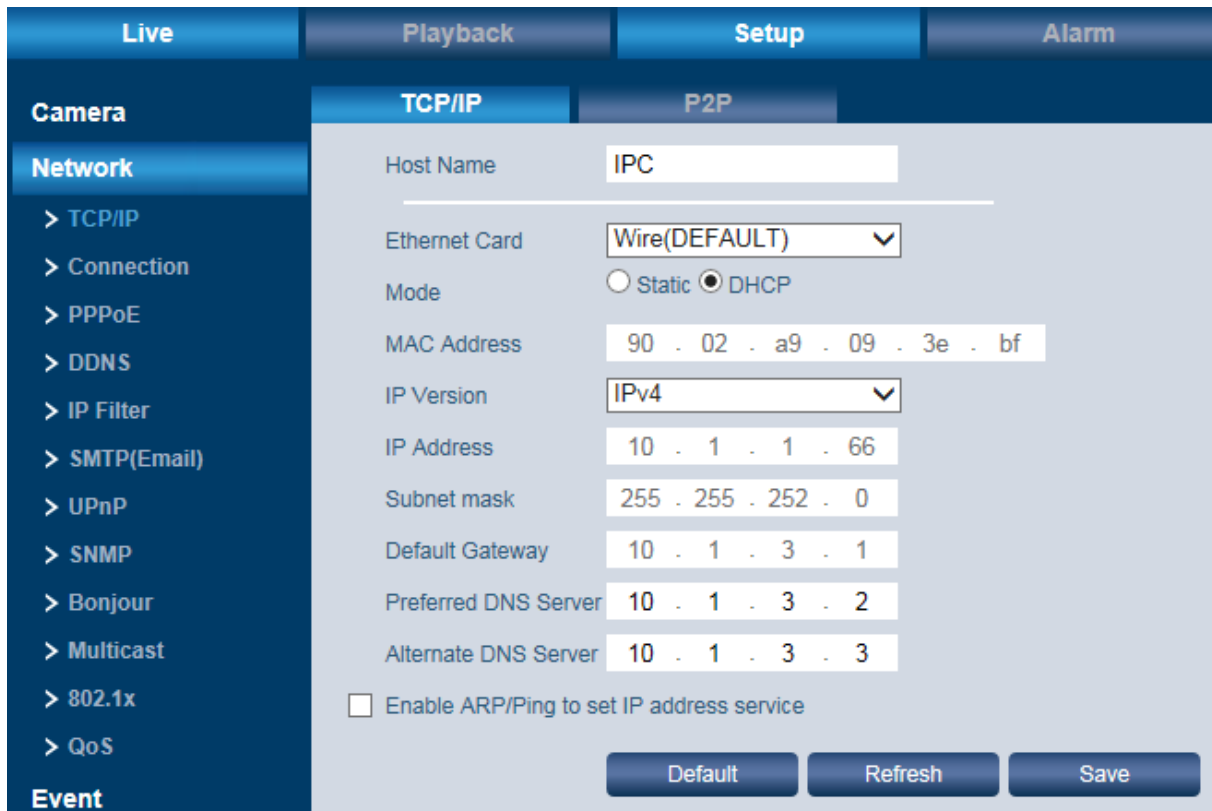

Here you can define the following settings:

- Host name: Max. 15 digits
- Ethernet card
- Mode: Static or DHCP. For IPV4, DHCP can be used. IPV6 only supports static addresses.
- MAC address of camera
- IP version: IPv4 or IPv6
- IP address of camera (an IP address must only be used once within the same network)
- Subnet mask
- Default gateway
- Preferred DNS server
- Alternate DNS server
- Enable ARP/ping to set IP address service (can be used to verify the connection to a device)

P2P:

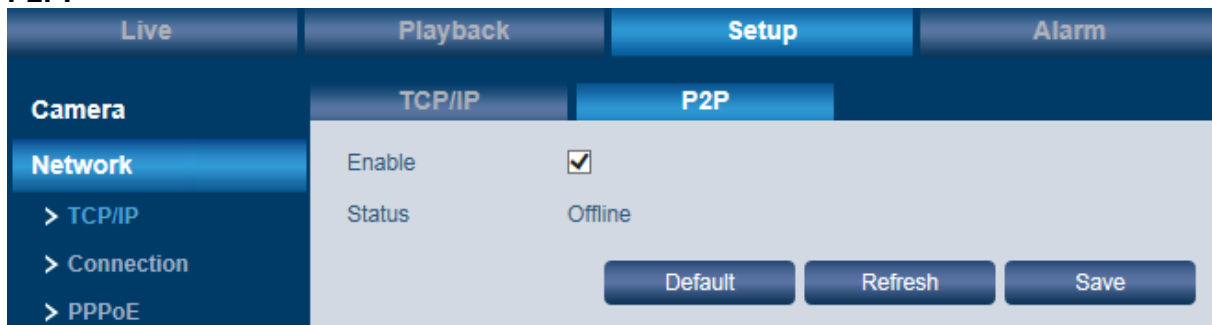

To access the camera via an App, the camera needs to be integrated into a network with Internet access.


If you now enable the P2P function, the camera establishes a connection to the SANTEC BW P2P server. Once the connection has been established successfully, the status changes to „Online“ within one minute. You can then access the camera via your App.

The P2P QR-code for App integration can be found here:

- Setup → Information → Version (see chapter 4.10.1)
- Setup Assistance (see chapter 6)

4.4.2 Setup → Network → Connection

Connection:

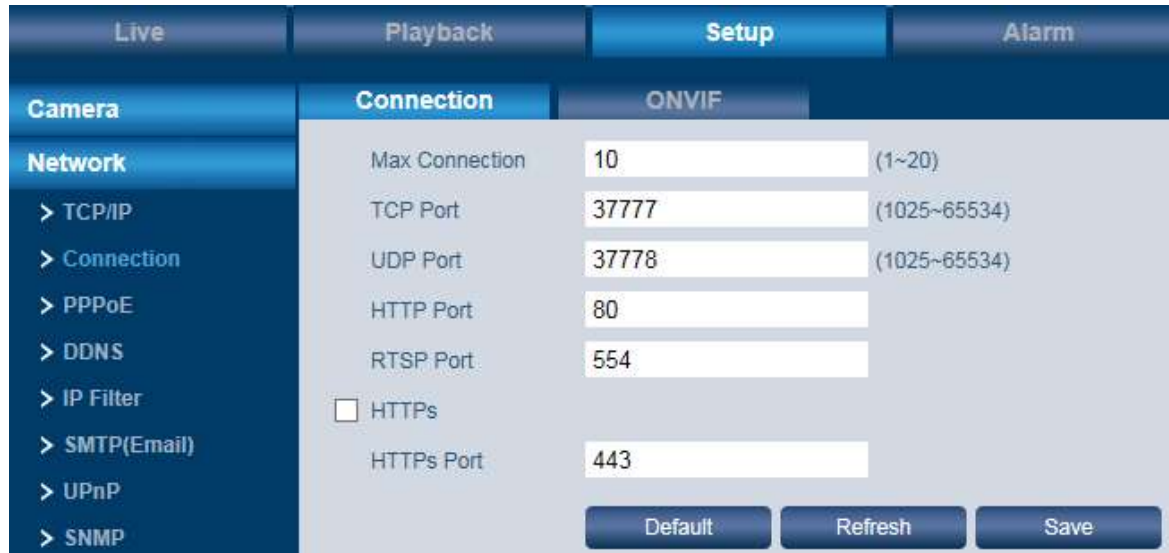

Live	Playback	Setup	Alarm
Camera	Connection	ONVIF	
Network			
> TCP/IP			
> Connection			
> PPPoE			
> DDNS			
> IP Filter			
> SMTP(Email)			
> UPnP			
> SNMP			

Max Connection	10	(1~20)
TCP Port	37777	(1025~65534)
UDP Port	37778	(1025~65534)
HTTP Port	80	
RTSP Port	554	
<input type="checkbox"/> HTTPs		
HTTPs Port	443	
<input type="button" value="Default"/> <input type="button" value="Refresh"/> <input type="button" value="Save"/>		

Here you can define the following settings:

- Max. connection: Indicates how many users can access the camera at the same time (max. 20).
- TCP port: Range: 1025 to 65534. Default port is 37777.
- UDP port: Range: 1025 to 65534. Default port is 37777.
- HTTP port: Default port is 80.
- RTSP port: Default port is 554.
- HTTPS port: Default port is 443.


Important:

If you change the ports, the following ports must not be used because they are reserved for other purposes.

0-1024, 37780-37880, 1900, 3800, 5000, 5050, 9999, 37776, 39999, 42323

Please don't use any ports which are default ports for other services.

ONVIF:

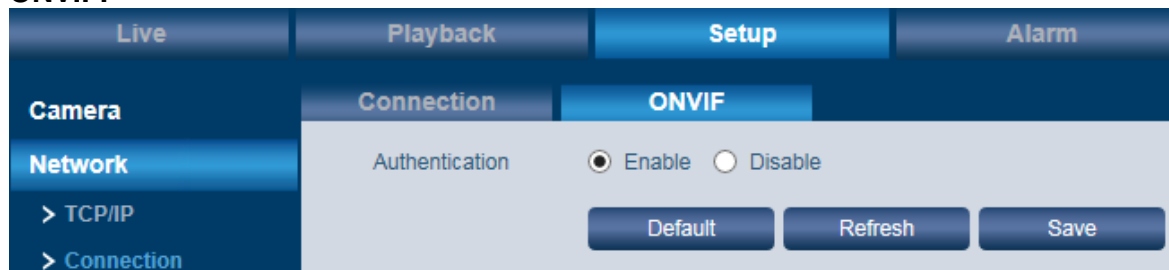


Live	Playback	Setup	Alarm
Camera	Connection	ONVIF	
Network			
> TCP/IP			
> Connection			

Authentication	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<input type="button" value="Default"/> <input type="button" value="Refresh"/> <input type="button" value="Save"/>	

ONVIF = Open Network Video Interface Forum)

All SNC cameras are ONVIF compatible which enables the configuration and integration of a SANTEC camera into most video management solutions know on the market.

4.4.3 Setup → Network → PPPoE

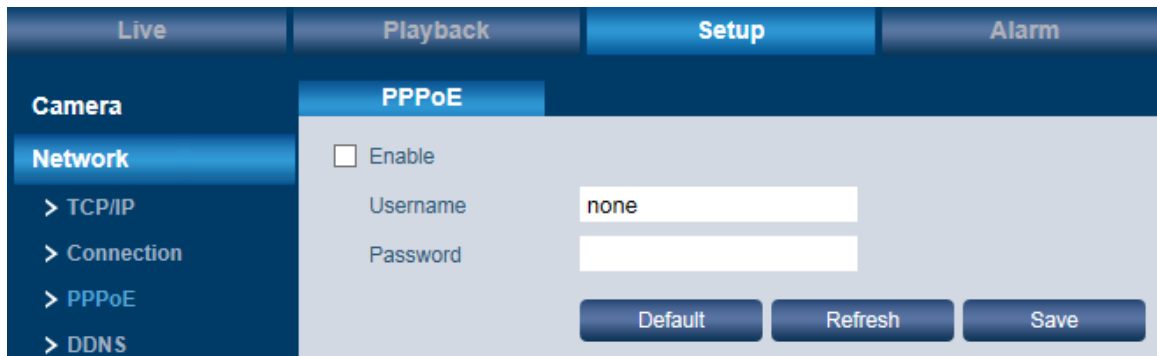

The screenshot shows the 'Setup' tab with the 'Network' menu expanded to 'PPPoE'. The 'Enable' checkbox is unchecked. The 'Username' field contains 'none' and the 'Password' field is empty. At the bottom are 'Default', 'Refresh', and 'Save' buttons.

PPPoE can be used to establish an Internet connection. You need the registration data (user name, password) from your provider. Once you have saved your entries, you have to re-boot the camera so that it is able to connect via PPPoE.

Note:

If you connect via PPPoE, you have to disable UPnP to avoid a conflict.

4.4.4 Setup → Network → DDNS



The screenshot shows the 'Setup' tab with the 'Network' menu expanded to 'DDNS'. The 'Server Type' dropdown is set to 'NO-IP DDNS'. The 'Server Address' field contains 'dynupdate.no-ip.com'. The 'Domain Name' field contains 'none'. The 'Username' field contains 'none'. The 'Password' field contains four dots. The 'Update Period' field contains '10' with the unit 'Minute (1~500)' next to it. At the bottom are 'Default', 'Refresh', and 'Save' buttons.

DDNS can be used to access the system from outside your network. In order to do this, an external server is required.

Server type:

Select the DDNS protocol from the list.

Server address:

This is the IP address of the DDNS server. Depending on the selected server, it will be set automatically.

Domain name:

- For server type „No-IP DDNS“ and “Dyndns DDNS“: You can self-define the domain name.
- For server type „Quick DDNS“: Depending on the selected mode („Auto“ or „Manual“) The domain name will be set automatically or you enter your self-defined domain name (the latter can be tested by using the „Test“ button).

User name, password:

- Not required for „Quick DDNS“
- User name and password which you use to login to the server

Update period:

Here you can set the interval (1-500 minutes; default = 10 minutes) for automatically transmitting the (new) camera IP-address.

Quick DDNS:

Using DDNS, you can access the device via a registered domain name.

Basically, Quick DDNS has the same functions as other DDNS clients. Quick DDNS connects the domain name with the IP address. The DDNS server is intended for your device only. You have to update the connection between domain name and IP address at regular intervals. The server does not require a user name, password or ID registration.

Each device has a standard domain name which is generated by the MAC address. You may also use a customized domain name.

Before using Quick DDNS, you have to enable this service and set it up as follows:

- Server address: www.quickddns.com
- Port number: 80
- Domain name: Either the standard domain name or a customized domain name.
- User name: Is optional. You may use e.g. your e-mail address.

Note:

Domain names which have not been used for more than one year, will be deleted by the system. Before this happens, however, you will receive an E-Mail notification.

4.4.5 Setup → Network → IP filter




Here you can set up trusted sites (IP or MAC addresses), i.e. these addresses are granted access to the camera.

- Enable the function „Trusted sites“. If you don't tick this box, the camera can be accessed from any computer.
- Click on „Add IP/MAC“. You can then enter an IP or MAC address or an IP range (segment).
- Enter the address.
- Click on „Save“.
- The listed trusted IP/MAC addresses can be modified or deleted at any time. Click on the respective icon behind the listed address.

Notes:

- You cannot add your own IP address to this list.
- A MAC verification can only be done if the computer and the camera are linked to the same network.
- If you click on „Default“, all trusted sites in this list will be deleted and the list is empty.

4.4.6 Setup → Network → SMTP (E-Mail)

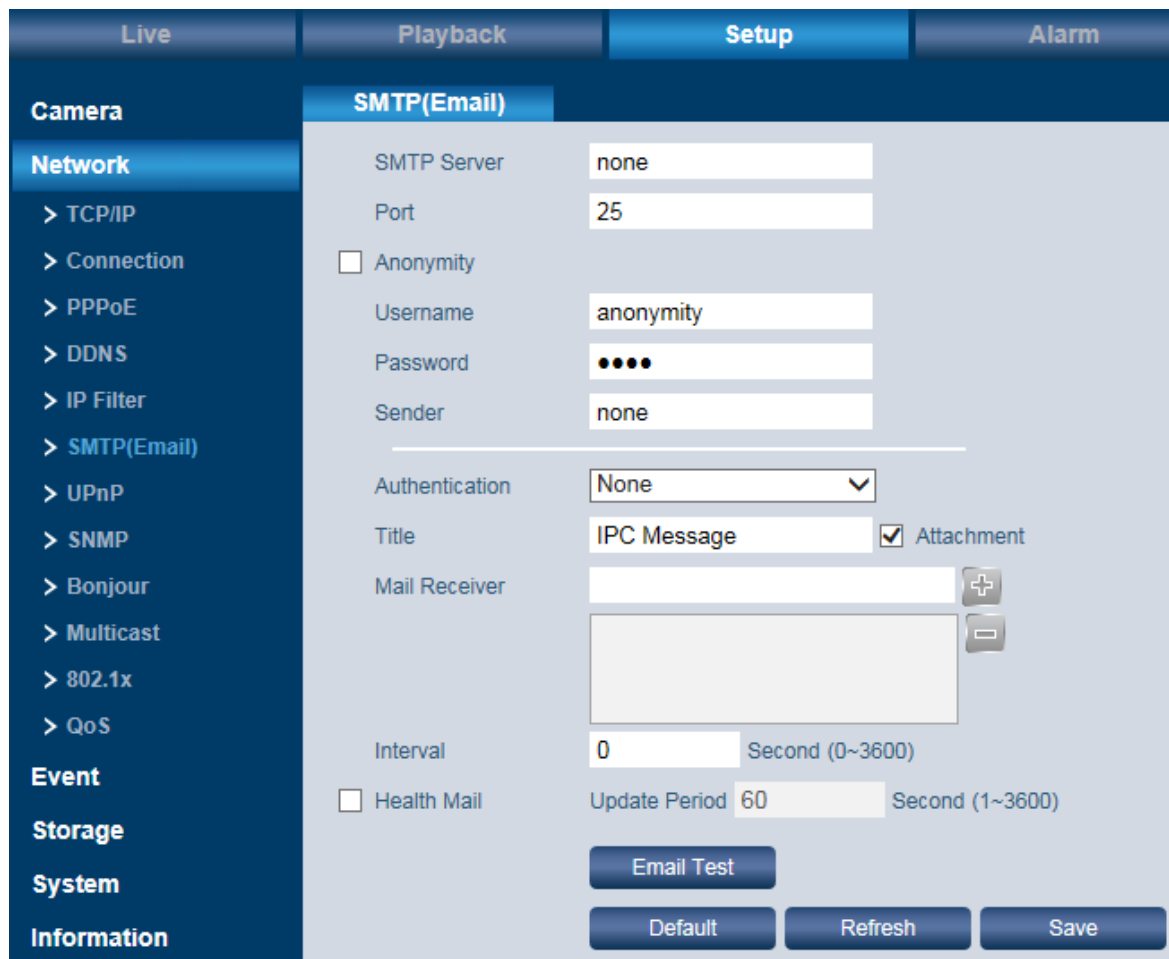

Here you can define, if, when and how an e-mail notification is sent in case of an event.

SMTP server, port:

Please enter the IP of your e-mail SMTP server and its port (default = 25).

Anonymity:

You can use this option to enable sending anonymous e-mails. In this case, user name, password and sender name are not required.

User name, password, sender:

Please enter your login details for your e-mail account.

Authentication:

Select „None“, SSL or TLS.

Title:

Here you can enter a subject line for the e-mail notification.

Attachment:

You can attach items (e.g. a snapshot) to the e-mail notification.

Mail receiver:

Enter the e-mail address to receive e-mail notifications and click on the plus icon. The e-mail address will be added to the list.

You may add up to 3 e-mail recipients.

If an e-mail notification is to be sent to this recipient in case of a detected motion, please enable the box „Send e-mail“ here:

Setup → Event → Video detect → Motion detect (see chapter 4.7.1)

Health mail:

Enable this function so that the camera regularly sends a notification to the defined e-mail address(es) to confirm that the system is still running properly.

Interval:

Enter the interval (0 to 3600 seconds) for the camera to send health e-mails. If you enter zero, there is no interval.

Sie können die hier festgelegten Einstellungen über den E-Mail Versand testen, indem Sie auf „E-Mail Test“ klicken.

4.4.7 Setup → Network → UPnP



Use UPnP to remotely access your system. In order to use UPnP it is necessary to set Port-Forwarding in your router. You can then access your device using the external address of your router (forwarded port).

Note:

Tick the „Enable“ box to activate this function. The device now supports the UPnP protocol. If you use Windows, please add and enable the UPnP protocol in the network settings. The camera can now be identified.

4.4.8 Setup → Network → SNMP



The screenshot shows the 'Setup' tab with the 'SNMP' sub-tab selected. On the left is a navigation menu with 'Camera' and 'Network' sections. The 'Network' section is expanded, showing options like TCP/IP, Connection, PPPoE, DDNS, IP Filter, SMTP(Email), UPnP, and SNMP. The main area contains the following configuration fields:

- SNMP Version:** Three radio buttons for SNMP v1, SNMP v2, and SNMP v3.
- SNMP Port:** A text input field containing '161' with a range indicator '(1~65535)' to its right.
- Read Community:** A text input field containing 'public'.
- Write Community:** A text input field containing 'private'.
- Trap Address:** An empty text input field.
- Trap Port:** A text input field containing '162'.

At the bottom right of the configuration area are three buttons: 'Default', 'Refresh', and 'Save'.

SNMP version:

Select either SNMP v1, SNMP v2 or SNMP v3. Only one SNMP version can be selected at a time. For SNMP v3, additional authorisations and encryptions can be defined.

SNMP port:

Range: 1 to 65535. Default port = 161.

Read/write community:

Default settings are „Public“ or „Private“.

Valid characters/digits: Numbers, letters, _ and –

Trap address:

Address to send trap addresses.

Trap port:

Range: 1 to 65535 liegen. Default port = 162.

4.4.9 Setup → Network → Bonjour

The screenshot shows the 'Setup' tab with the 'Bonjour' sub-tab selected. On the left, a sidebar lists 'Camera' and 'Network' (selected). Under 'Network', there are links for 'TCP/IP', 'Connection', and 'PPPoE'. The main area shows the 'Bonjour' settings. The 'Enable' checkbox is checked. The 'Server Name' field contains '90-02-a9-09-3e-bf'. At the bottom, there are 'Default', 'Refresh', and 'Save' buttons.

If Bonjour is enabled and the Bonjour protocol is supported, this device is automatically identified in the network as an IP camera.

In the network, the IPC server name connects to the Bonjour protocol.

The system displays the server name e.g. in the network explorer to all users which operate in the same address range.

4.4.10 Setup → Network → Multicast

The screenshot shows the 'Setup' tab with the 'Multicast' sub-tab selected. On the left, a sidebar lists 'Camera' and 'Network' (selected). Under 'Network', there are links for 'TCP/IP', 'Connection', 'PPPoE', 'DDNS', 'IP Filter', 'SMTP(Email)', and 'UPnP'. The main area shows the 'Multicast' settings. There are two sections: 'Main Stream' and 'Sub Stream'. Both have an 'Enable' checkbox checked. The 'Multicast Address' field for both is '239.1.0.0' with a range '(224.0.0.0-239.255.255.255)' below it. The 'Port' field for both is '1000' with a range '(1025-85534)' below it. At the bottom, there are 'Default', 'Refresh', and 'Save' buttons.

Multicast describes the transmission of data from one point to a group (multi-point connection). When there are multiple hosts to receive the same data packet, multiple cast is the best option to reduce the broad width and the CPU load. Hence data packets can efficiently be sent to several recipients at the same time. This is done by using special multicast IP addresses.

Please note that specific hardware might be required. Not all switches or routers support this function.

Multicast address:

- Valid IPs for multicast groups: 224.0.0.0 to 239.255.255.255.
- Reserved IPs: 224.0.0.0 to 224.0.0.225
- Administrative addresses: 239.0.0.0 to 239.255.255.255: Cannot be used for Internet transmissions.

Port:

Valid ports: 1025 to 65534.

Default port for main stream: 40000

Default port for sub stream: 40002

If you change the multicast address or the port, please re-boot the camera.

4.4.11 Setup → Network → 802.1x

The screenshot shows the 'Setup' tab of a web interface. On the left, a sidebar menu has 'Camera' and 'Network' (highlighted) under 'Camera'. Under 'Network', there are links for 'TCP/IP', 'Connection', 'PPPoE', 'DDNS', and 'IP Filter'. The main area is titled '802.1x'. It contains an 'Enable' checkbox (unchecked), an 'Authentication' dropdown menu set to 'PEAP', a 'Username' text field with 'none', and a 'Password' text field with four dots. At the bottom right of the form are three buttons: 'Default', 'Refresh', and 'Save'.


Authentication:

PEAP (Protected EAP Protocol)

User name, password:

User name and password which the camera uses to login to the server.

4.4.12 Setup → Network → QoS

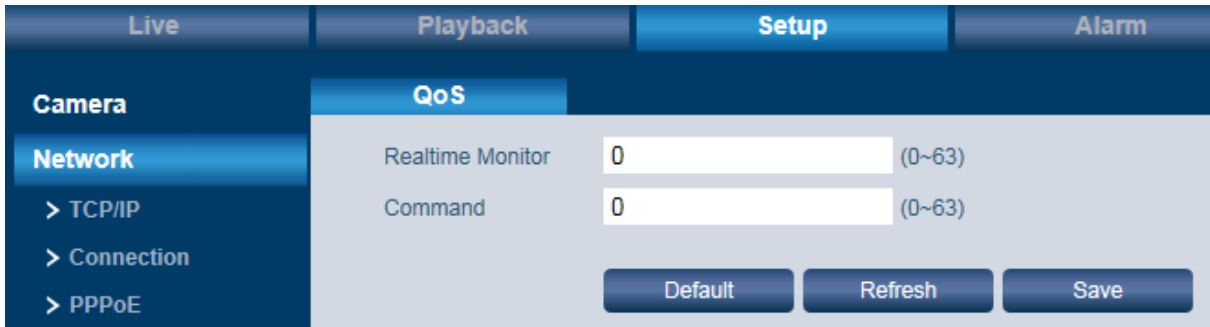

The screenshot shows the 'Setup' tab of the web interface. On the left, a sidebar menu has 'Camera' and 'Network' (highlighted) under the 'Live' tab. The 'Network' section includes links for '> TCP/IP', '> Connection', and '> PPPoE'. The main area is titled 'QoS' and contains two input fields: 'Realtime Monitor' and 'Command', both set to '0' with a range of '(0~63)' indicated. At the bottom right of the main area are three buttons: 'Default', 'Refresh', and 'Save'.

QoS (Quality of Service) allows to transmit packets in the network traffic based on priority. This is particularly important when network congestion occurs. According to the DSCP (Differentiated Services Code Point) model, traffic flows are classified and marked with DSCP values and thus receive the corresponding forwarding treatment from DSCP capable routers.

64 levels (0-63) are supported as priority for sending data packets.

Level 0 = lowest priority

Level 63 = highest priority

Realtime monitor:

Data packets for realtime monitors.

Command:

Data packets for other devices with lower priority.

4.5 Setup → PTZ

Note:

This function is only available for camera model SNC-211RSIA.

4.5.1 Setup → PTZ → Protocol



Select the network protocol here.

4.5.2 Setup → PTZ → Function

Here you can define various PTZ functions which you can then display e.g. in the live view page.



Preset:


Up to 80 presets can be defined.



- Click on „Add“ to add a new preset.
- Adjust the camera position by using the direction buttons and the zoom/focus/iris buttons. Then click on the save icon.
- To delete a specific, individual preset, click on the respective delete icon.
- To delete all presets from the list, click on the „Clear“ button.

Tour:

Up to 8 tours can be defined.

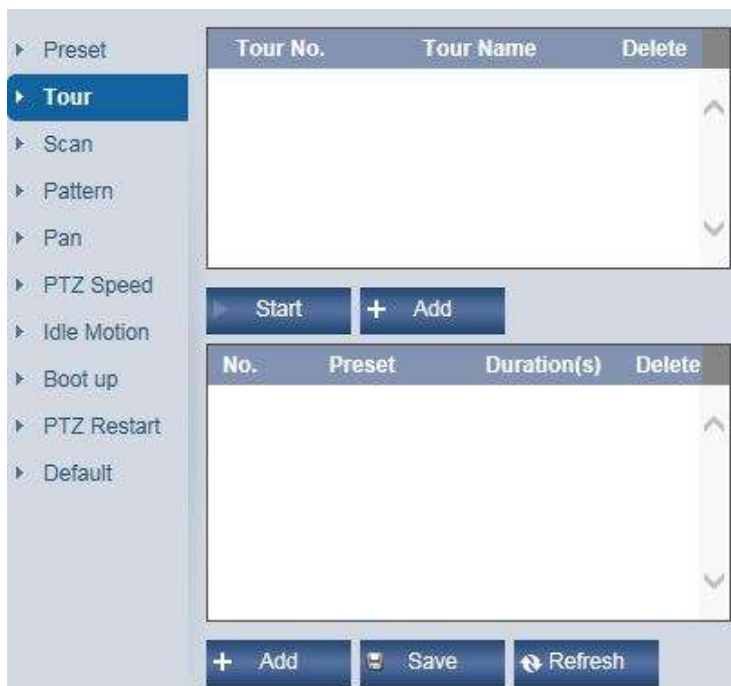

- First of all, create at least one preset.
- Click on „Add“ to add a new tour.
- In the bottom field, add the desired preset.
- Finally, click on „Save“.

Scan:



Up to 5 scans and their respective speed can be defined here.

Pattern:



Up to 5 patterns can be defined.
Click on „Start“ to start or stop the pattern.

Pan:



Here you can adjust the panning speed (1-8)

PTZ speed:



Here you can adjust the PTZ speed (low, middle, high).

Idle motion:




Here you can define the action the camera should take if it has been idle for a specific time.

Example:

After 10 minutes of being idle, the camera should run a tour.

Boot up:

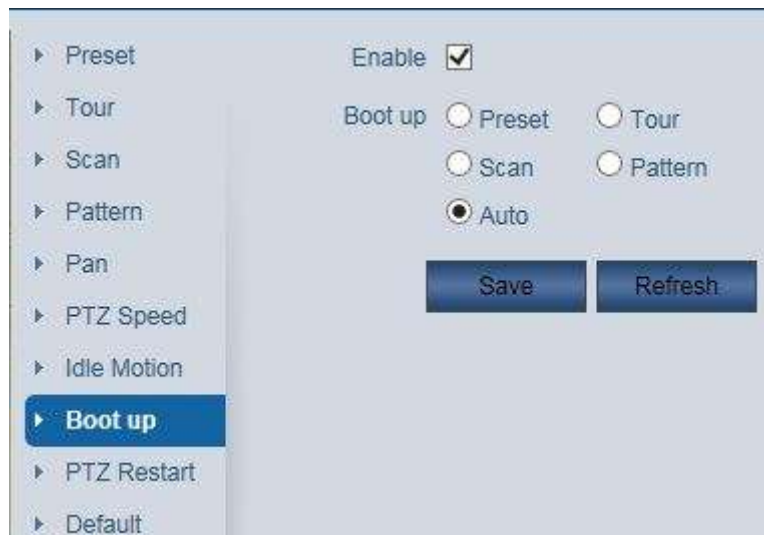

Here you can define what kind of PTZ function the camera should run when started.

PTZ Restart:

If enabled, a recalibration of the PTZ sensors is done.


Default:

Click here to restore all settings to default values.

4.6 Setup → Peripheral

Note:

This function is only available for camera model SNC-211RSIA.

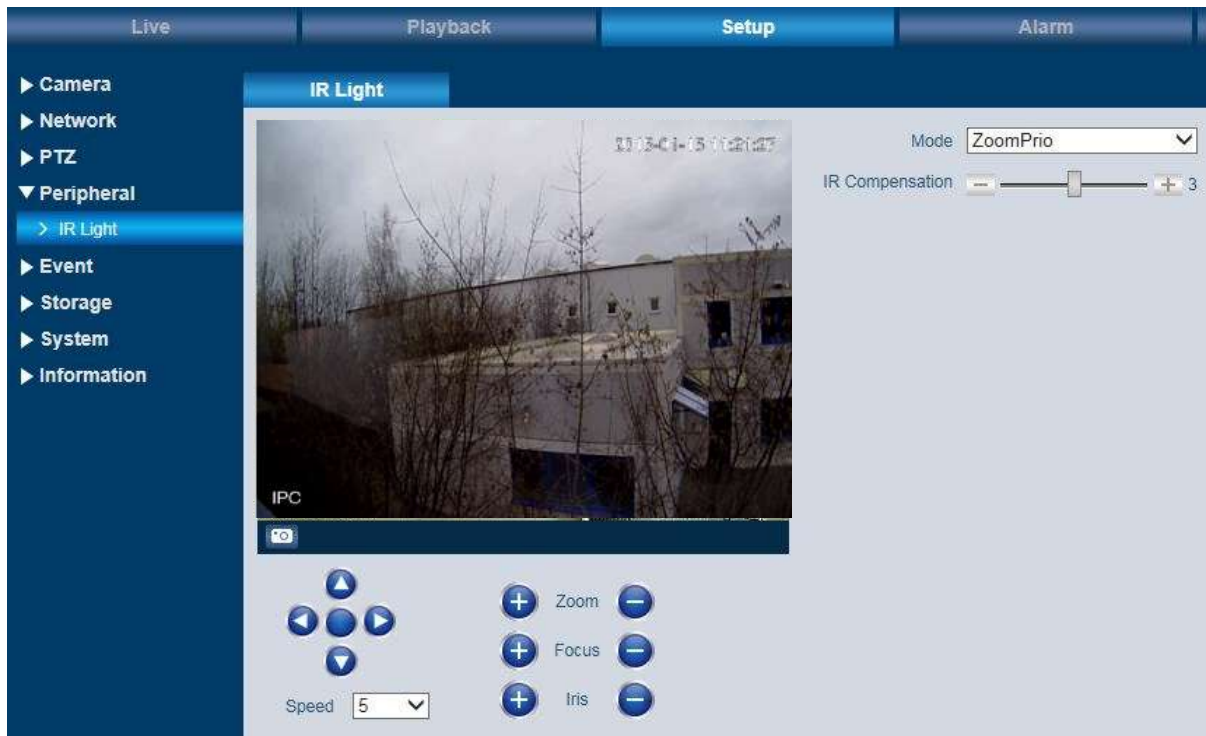


Here you can made adjustments for the IR light.

4.7 Setup → Event

4.7.1 Setup → Event → Video detect

Here you can define settings for motion detection and tampering detection.

Motion detect:

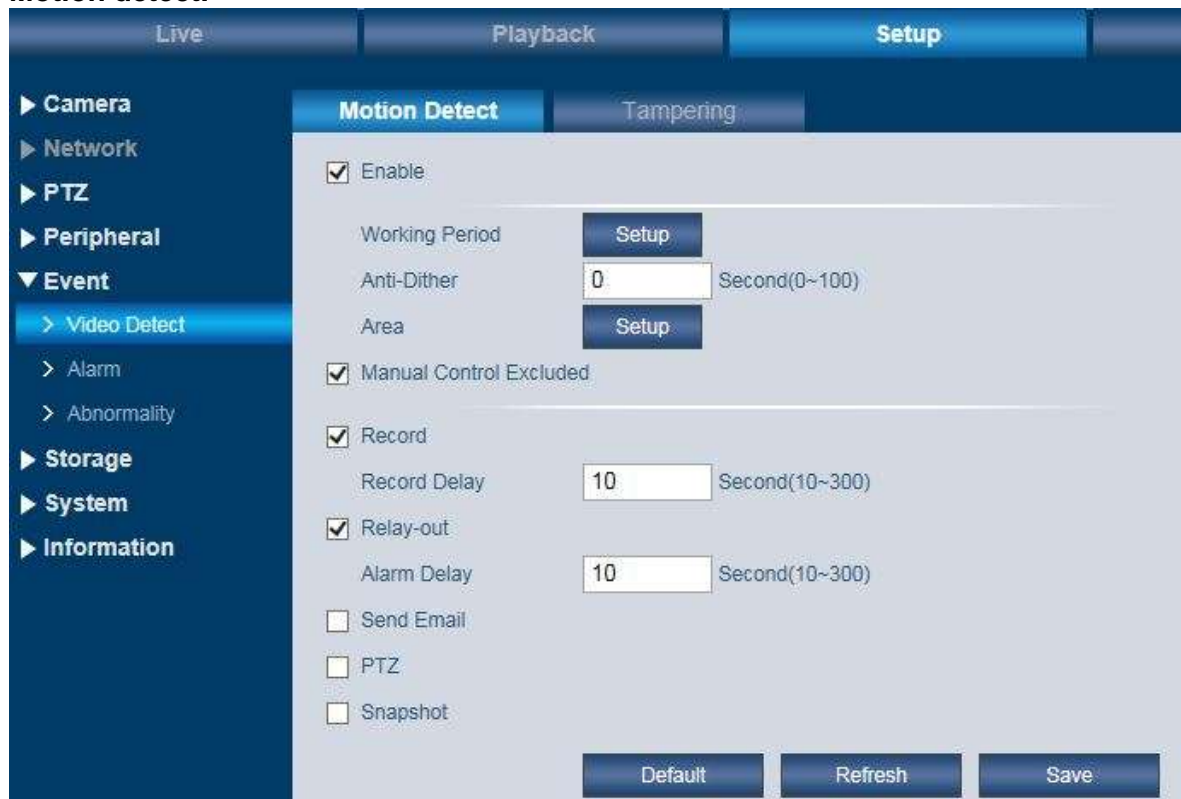

The screenshot shows the 'Motion Detect' configuration window. It includes a sidebar with navigation options like Camera, Network, PTZ, Peripheral, Event (with Video Detect selected), Storage, System, and Information. The main area contains checkboxes for 'Enable', 'Manual Control Excluded', 'Record', 'Relay-out', 'Send Email', 'PTZ', and 'Snapshot'. It also features input fields for 'Anti-Dither' and 'Alarm Delay', and buttons for 'Setup', 'Default', 'Refresh', and 'Save'.

Enable this function.

Working period:

- Click on „Setup“. For each day of the week, up to 6 periods can be defined.
- Click on the little wheel for each day.
- Enable each period 1-6 and enter the desired time frame. Alternatively, you can press and hold the left mouse key to highlight the time in the time bar.
- Finally click on „Save“.



The screenshot shows the 'Working Period' configuration window. It features a 24-hour time bar at the top. Below it are rows for each day of the week (Sunday to Saturday). At the bottom, there are checkboxes for 'All', 'Sunday', 'Monday', 'Tuesday', 'Wednesday', 'Thursday', 'Friday', and 'Saturday'. Below these are six rows for 'Period 1' through 'Period 6', each with time selection fields (HH:MM:SS) and a checkbox. Buttons for 'Save' and 'Cancel' are at the bottom.


Anti-Dither:

The camera can only process one event/alarm at the same time. Here you can define the interval (0-100 seconds) between two events/alarms.

Area:

You can define up to 4 areas for motion detection. By default, the whole area is activated. If you wish to select only a few areas in the grid, empty the grid by clicking „Remove all“ or right-click. Drag the mouse into the desired fields in the grid. Proceed in the same way for the other area definition.

For each area, the sensitivity and threshold for motion detection can be defined.

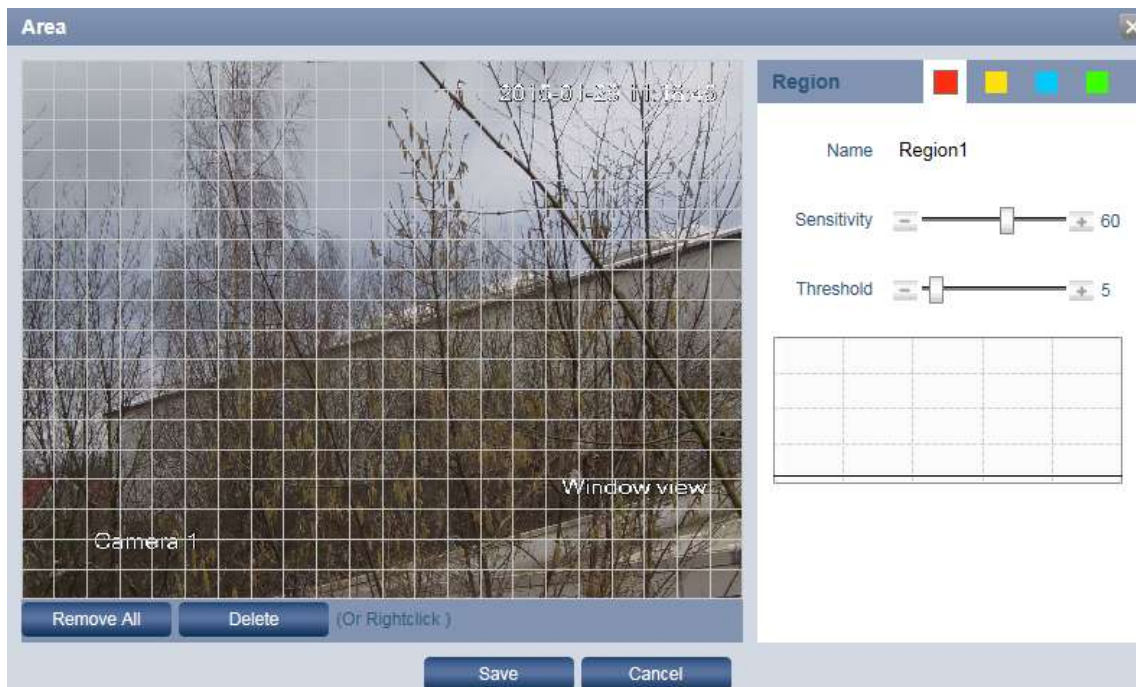

Manual control excluded (only available for camera model SNC-211RSIA):

If enabled, the manual PTZ control of the camera will be deactivated as long as the alarm lasts.

Record:

Enable the alarm recording function. If enabled, the system makes event-triggered recordings. If y continuous recording is active, it will not be deactivated. In the recording there will be a hint regarding the time of this event.

Record delay:

Define the interval between 2 recordings. This interval may range from 10 to 300 seconds. Default is 10 seconds.

Send e-mail:

If enabled, an e-mail notification is sent to the defined e-mail address(es) in case of a detected motion (see chapter 4.4.6).

PTZ:

In case of a detected motion, the PTZ control is activated.

Snapshot:

If enabled, a snapshot is made in case of a detected motion.

Video tamper:

The screenshot shows the 'Video Detect' configuration page under the 'Setup' tab. The left sidebar lists various settings categories: Camera, Network, PTZ, Peripheral, Event (expanded), Video Detect (selected), Alarm, Abnormality, Storage, System, and Information. The main area is titled 'Motion Detect' and 'Tampering'. It contains the following settings:

- ☒ Enable
- Working Period: [Setup button]
- ☒ Record
- Record Delay: [10] Second(10~300)
- ☒ Relay-out
- Alarm Delay: [10] Second(10~300)
- ☐ Send Email
- ☐ PTZ
- ☐ Snapshot

At the bottom right, there are three buttons: 'Default', 'Refresh', and 'Save'.

Here you can define the actions to be taken in case of a detected video tampering, e.g. caused by moving the camera or covering it. Basically, the setting options are the same as describe in the previous section on motion detection.

4.7.2 Setup → Event → Abnormality

Here you can define alarms for abnormal events.

No SD card:

If enabled, an e-mail notification can be sent in case of a missing SD card.

Capacity warning:

If enabled, an e-mail notification can be sent if the SD card has exceeded its storage limit.

SD card error:

If enabled, an e-mail notification can be sent in case of a defective SD card.

Disconnected

If enabled, the recording is started with the here defined delay in case of a disconnection.

IP conflict:

If enabled, the recording is started with the here defined delay in case of an IP conflict.


Illegal access *(only available for camera SNC-311FSNF):*

If within the defined time (3-10 minutes) wrong login data has been entered several times, the system sends an alarm and the user will be locked.

To send an e-mail notification, please enable the respective box.

4.8 Setup → Storage

4.8.1 Setup → Storage → Schedule

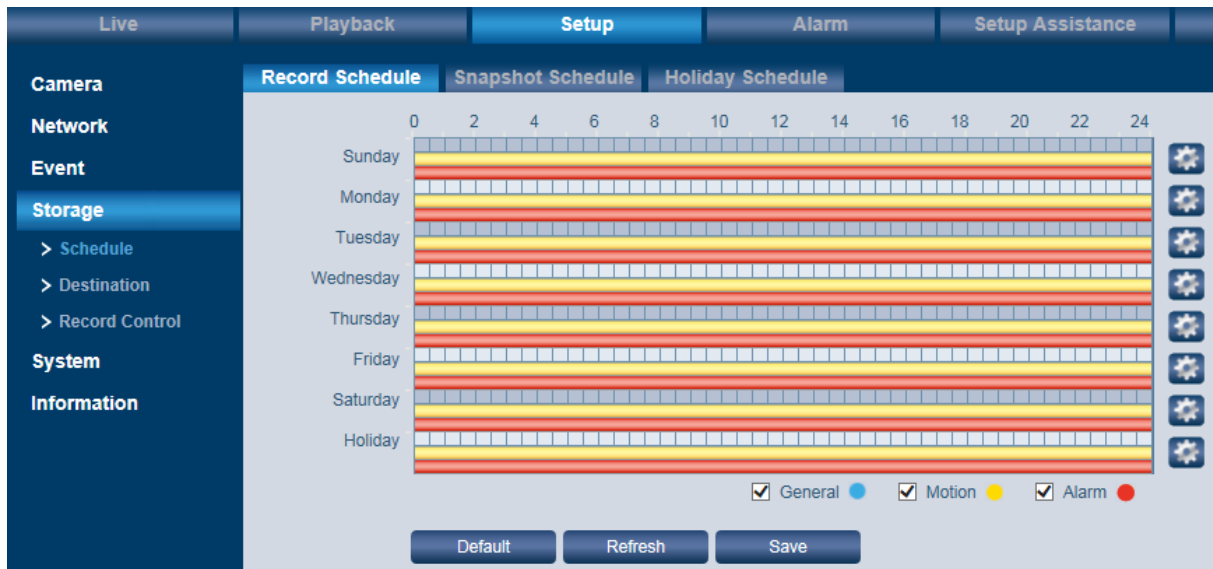

Here you can define the schedule for recordings, snapshots and holidays (i.e. the period where you are absent).

Record and snapshot schedule:

- Click on „Setup“. For each day of the week, up to 6 periods can be defined.
- Click on the little wheel for each day.
- Enable each period 1-6 and enter the desired time frame. Alternatively, you can press and hold the left mouse key to highlight the time in the time bar.
- You can differentiate between
 - Blue: General (normal) recording
 - Yellow: Motion recording
 - Red: Alarm recording
- Click on „Save“.

Holiday schedule:

Here you can define the days you will be absent (e.g. on holidays) but videos or snapshots should be made.



4.8.2 Setup → Storage → Destination

Note:


The definition of storage paths on this page only applies to recordings/snapshots which are generated by an event or schedule.

Settings on this page do not apply to manual recordings/snapshots.

Storage paths for manual recordings/snapshots can be defined here (see chapter 4.2.4):

Setup → Camera → Video → Path

Path:

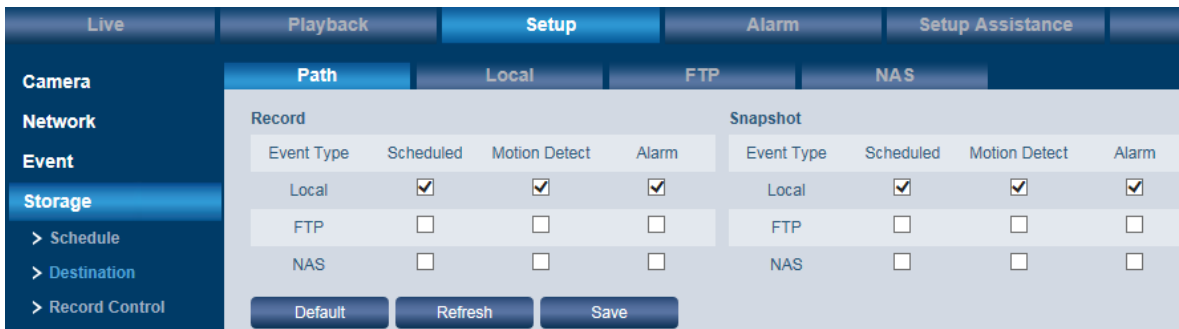

Record				Snapshot			
Event Type	Scheduled	Motion Detect	Alarm	Event Type	Scheduled	Motion Detect	Alarm
Local	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Local	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
FTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	FTP	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
NAS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	NAS	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Buttons: Default, Refresh, Save

Here you can define the path to store recordings (videos) as well as snapshots.

For each of the 3 event types „schedule“, „motion detect“ and „alarm“, the following storage paths are available:

Local (=SD card in camera), FTP or NAS.

(Note: NAS is not available for camera model SNC-211RSIA)

Please note that for these 3 eventy types only one identical storage path can be selected. It is for example not possible to store scheduled recordings locally and motion recordings on FTP.

Local:



To store recordings/snapshots on the camera's SD card, make sure that a micro SD card is inserted in the camera.

As a next step, it is important to format the SD card. Click on "Format".

Attention:

When formatting the SD card, all other data stored so far on the card, will be deleted.

FTP:




In order to store data on the FTP server, please tick „Enable“.

Enter the parameter of the FTP server. Make sure that the FTP server and the camera are in the same network.

Note:

The box „Enable“ can only be checked if you have selected FTP as storage path on the previous page.

NAS (not available for camera model SNC-211RSIA):

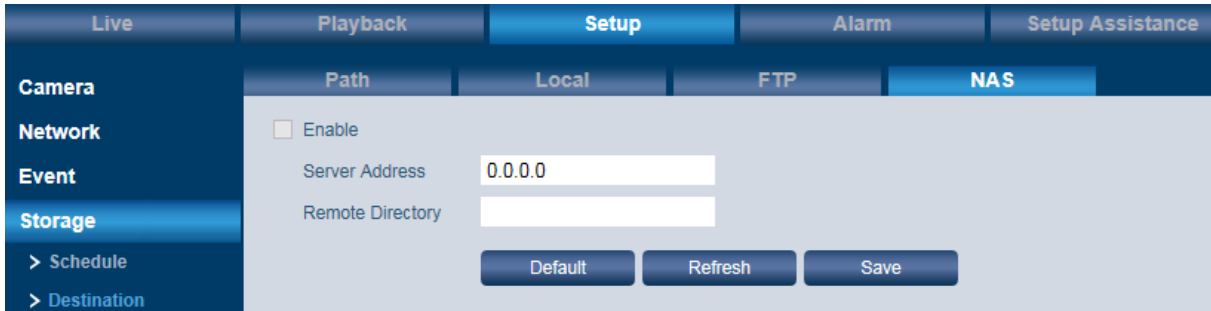


In order to store data on the NAS server, please tick „Enable“.
Enter the parameter of the NAS server

Note:

The box „Enable“ can only be checked if you have selected NAS as storage path on the previous page.

4.8.3 Setup → Storage → Record control

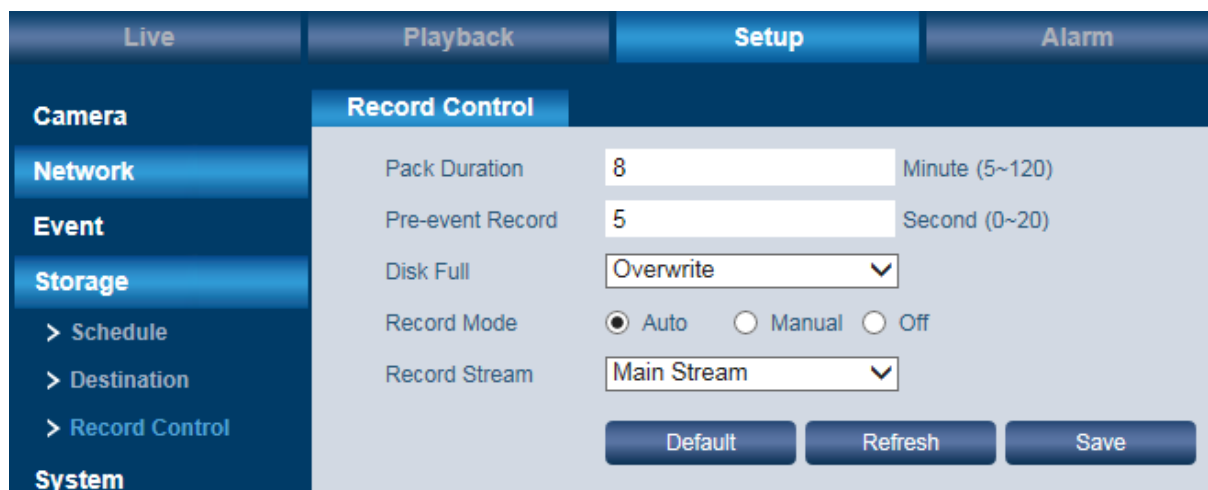

The screenshot shows the 'Record Control' configuration page. On the left is a sidebar with a menu: Camera, Network, Event, Storage (selected), and System. Under 'Storage', there are sub-items: Schedule, Destination, and Record Control. The main area has a 'Record Control' tab. It contains the following settings:

- Pack Duration:** 8 Minute (5~120)
- Pre-event Record:** 5 Second (0~20)
- Disk Full:** Overwrite (dropdown menu)
- Record Mode:** Auto (selected), Manual, Off
- Record Stream:** Main Stream (dropdown menu)

At the bottom right of the settings area are three buttons: Default, Refresh, and Save.

Pack duration:

Define the maximum file size on the storage path (5-120 minutes; default = 8 minutes).

Pre-event record:

The time you have defined here (0-20 seconds; default = 5 seconds) will be the pre-event recording time, thus prior to the event. For example: You set the time to 5 seconds, then the video will be stored already 5 seconds prior to the triggered alarm

Disk full:

If the storage disk is full, you have 2 options: Either to stop the recording or to overwrite older data.

4.9 Setup → System

4.9.1 Setup → System → General

General:


- You can define a device name, i.e. a camera name.
- You can select the language (English or German). Alternatively, click on the German/English flag on the top of the screen.
- Select your video standard (PAL or NTSC).

Date & time:

Here you can set the date and time for the camera. The correct date/time is important, especially when you time-search for recorded events.

You may also set the DST (Daylight Savings Time) as well as the time synchronization with the NTP server.

4.9.2 Setup → System → Account

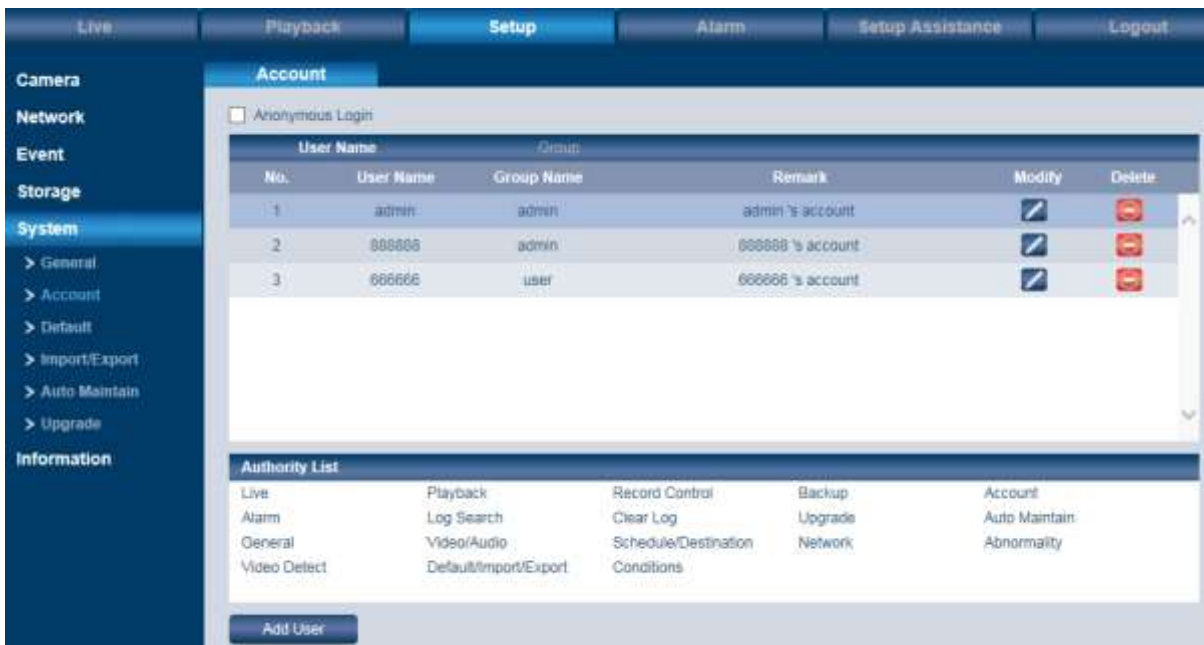

The screenshot shows the 'Account' management page. At the top, there are tabs for 'Live', 'Playback', 'Setup', 'Alarm', 'Setup Assistance', and 'Logout'. The 'Setup' tab is active, and the 'Account' sub-tab is selected. On the left, a sidebar lists various system settings: Camera, Network, Event, Storage, System (highlighted), and Information. Under 'System', there are links for General, Account (selected), Default, Import/Export, Auto Maintain, and Upgrade. The main content area has an 'Anonymous Login' checkbox. Below it is a table with columns: No., User Name, Group Name, Remark, Modify, and Delete. The table contains three entries: 1. admin, admin, admin's account; 2. 888888, admin, 888888's account; 3. 888888, user, 888888's account. At the bottom, there is an 'Add User' button and an 'Authority List' table showing permissions for various functions like Live, Alarm, General, Video Detect, Playback, Log Search, Video/Audio, Default/Import/Export, Record Control, Clear Log, Schedule/Destination, Conditions, Backup, Upgrade, Network, Account, Auto Maintain, and Abnormality.

No.	User Name	Group Name	Remark	Modify	Delete
1	admin	admin	admin's account		
2	888888	admin	888888's account		
3	888888	user	888888's account		

Authority List

Live	Playback	Record Control	Backup	Account
Alarm	Log Search	Clear Log	Upgrade	Auto Maintain
General	Video/Audio	Schedule/Destination	Network	Abnormality
Video Detect	Default/Import/Export	Conditions		

Add User

You can login anonymously, i.e. user name and password are not required.

In the account list, you can manage users and user groups.

- In the list, users and groups are listed.
- Use the pencil icon next to a user/user group, e.g. to change the password.
- Use the delete icon next to a user/user group to delete it.
- Click on „Add user“ to add a user or a user group to the list and to grant him permissions.
- Max. 64 users and up to 20 groups can be defined.


4.9.3 Setup → System → Default

If you click here, all settings will be restored to default values.

4.9.4 Setup → System → Import/Export

Click on „Import“ to save settings on the camera (e.g. from your computer).
Click on „Export“ to save setting from your camera to your computer.

4.9.5 Setup → System → Auto Maintain

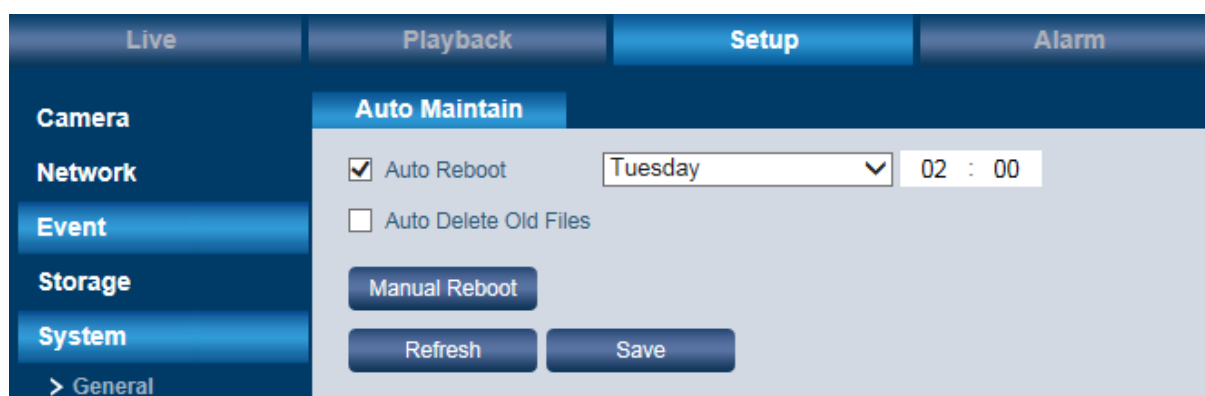

The screenshot shows the 'Auto Maintain' settings page. On the left is a sidebar with a menu: 'Camera', 'Network', 'Event', 'Storage', 'System' (highlighted), and '> General'. The top navigation bar has tabs: 'Live', 'Playback', 'Setup' (active), and 'Alarm'. The 'Auto Maintain' section contains the following options:

- ☒ Auto Reboot: A dropdown menu shows 'Tuesday' and a time field shows '02 : 00'.
- ☐ Auto Delete Old Files
- Manual Reboot button
- Refresh button
- Save button

Auto reboot:

If enabled, you can set the date and the time when to automatically reboot the camera.

Auto delete old files:

If enabled, you can define after how many days data will be automatically deleted (1-31 days old).

Manual reboot:

Click here to manually reboot the camera.

4.9.6 Setup → System → Upgrade

Here you can select the path (“Browse”) from which you wish to upload a new firmware to the camera. Then click on “Upgrade”.


File format of upgrade file: „.bin“

Note:

If an upgrade is not properly or not fully done, the camera may malfunction.

4.10 Setup → Information

4.10.1 Setup → Information → Version



The screenshot shows the web interface with the 'Setup' tab selected. The left sidebar contains a menu with 'Information' expanded, showing 'Version', 'Log', and 'Online User'. The main content area is titled 'Version' and contains the following information:

Device Type	SNC-211RSIA
Master Version	2.210.BW00.1.R.A.2017.3N.NR, build : 2014-12-19
WEB Version	3.2.1.236449
ONVIF Version	2.4.1
PTZ Version	2.02.15.RHNPEI
S/N	22111204148023


Below the table is a QR code and an illustration of a mobile device labeled 'QR-Code Reader' with signal waves indicating connectivity. At the bottom, it says 'Copyright 2014. All Rights Reserved.'

Here you find various version numbers. This is for reference only and can not be edited.

Here you also find the P2P code which you can scan with your mobile device to access the camera via the App.

The P2P code is also available under „Setup Assistance“ (see chapter 6).

4.10.2 Setup → Information → Log

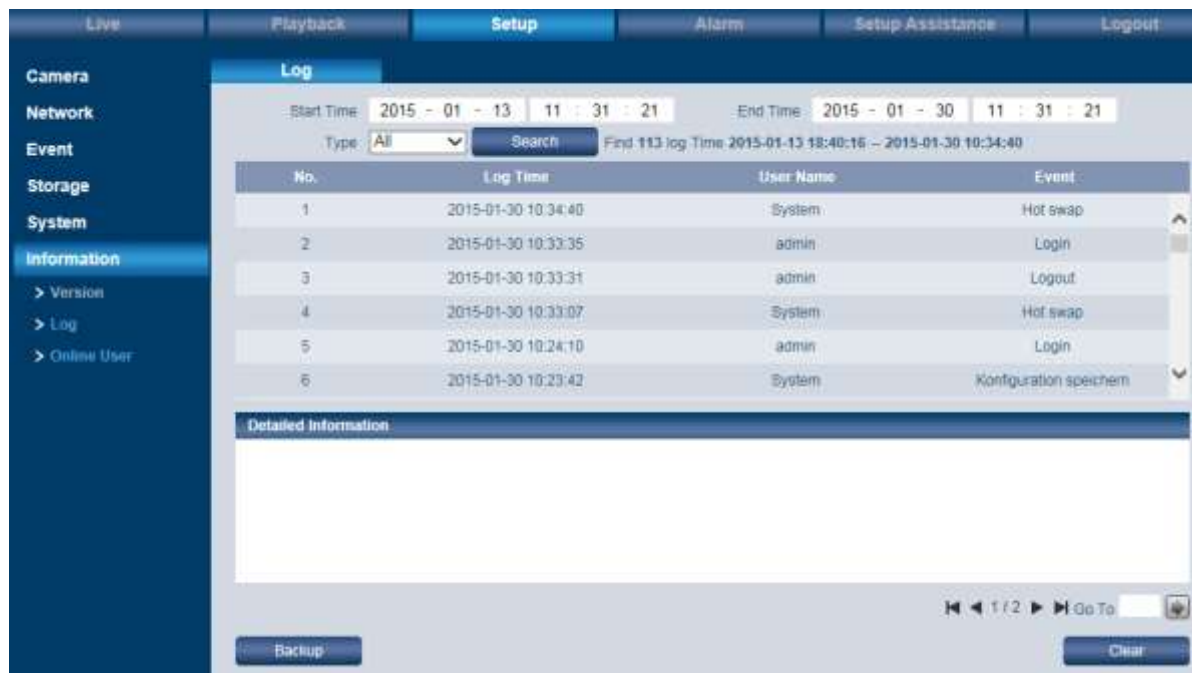

The log (history) shows all information regarding users, events, alarms, settings, etc.

Select a type you wish to search for:

All, system, setting, data, event, recording, account, clear log.

Enter a time frame (start time, end time) and click on „Search“.

Use the arrows to navigate through the log list.


Click on “Clear” to empty the entire log list.

Click on „Backup“ to save the log file of the camera to your computer.

4.10.3 Setup → Information → Online user

All users currently logged in at the camera are listed here.

5. Alarm

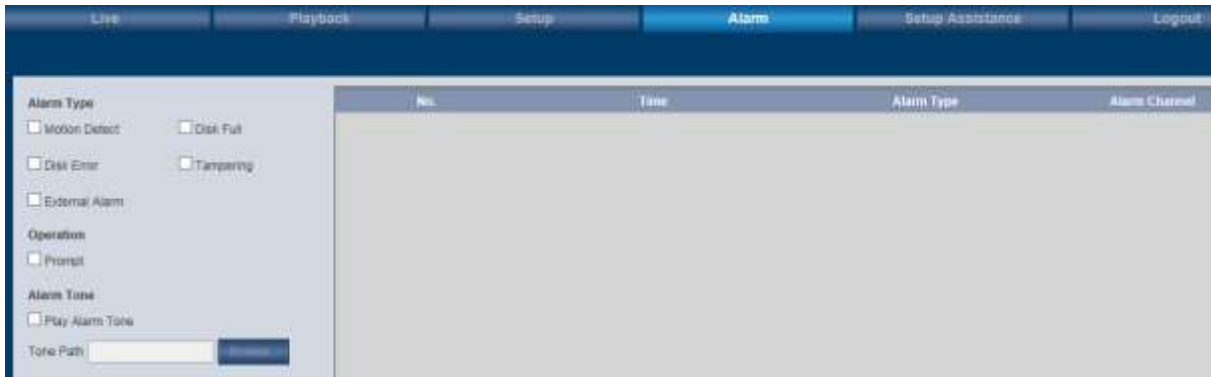


Here you can define the parameters for an alarm.

Alarm type:

Here you can select for which types of events an alarm should be triggered, e.g. motion detection, tampering, illegal access, usw.
You may select several or all options.

Operation:


If you enable „Prompt“, an alarm icon is displayed in the video image. 

Alarm tone:

If enabled, an alarm sound is sent if an alarm occurs.
If you wish to have a customised alarm sound, please select a path („Browse“) and then select your file. Only WAV files are supported.

6. Setup Assistance

The Setup Assistance helps you to adjust camera settings quickly and in a convenient way.

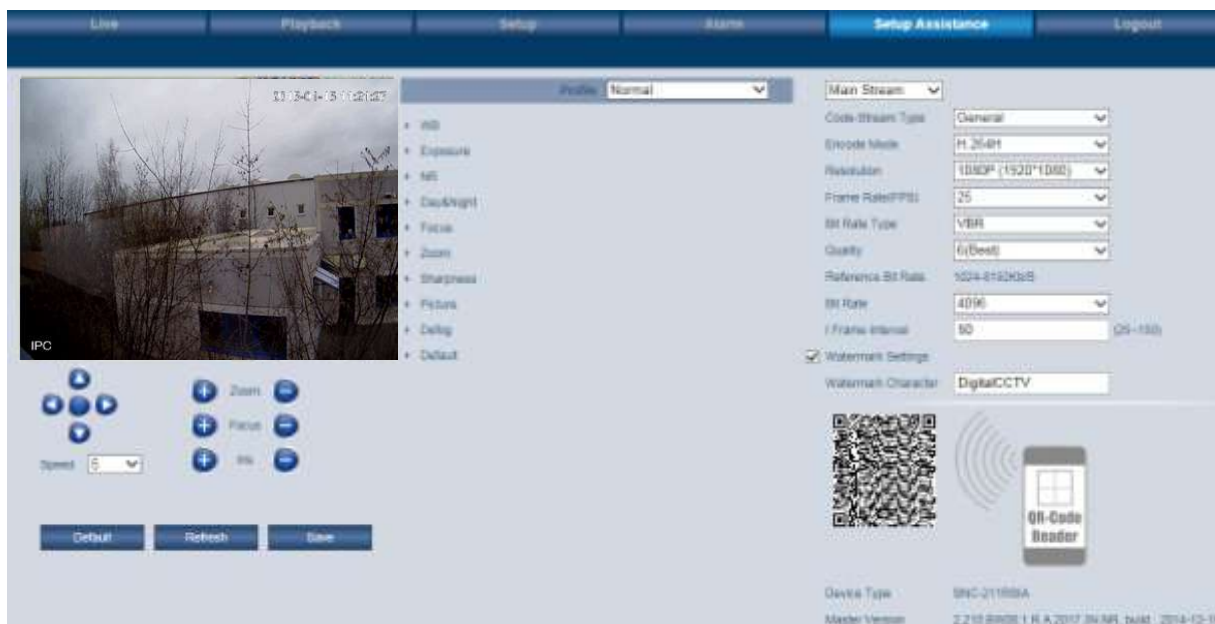

Here you can adjust the major settings for Main Stream, Sub Stream 1 and Sub Stream 2. Camera information are listed for service purposes.

Moreover, you can scan the P2P code with your mobile device to access the camera via the App.

7. Logout

If you want to logoff from the camera, click on „Logout“ and you will be immediately logged off without further prompting. The login page appears and you may logon again if you wish, e.g. using a different user name.

The image shows a web login interface for a camera. It has a light blue background with a dark blue border. In the top left corner, there is a red circular icon. The title "Web Login" is in large, bold, dark blue letters. To the right of the title is the "BURG WÄCHTER" logo in a green and yellow box, and below it, the word "SANTEC" in bold, dark blue letters. In the center, there are two input fields: "Username:" with the text "admin" and "Password:". Below the input fields are two buttons: "Login" and "Cancel". A large, faint gear icon is visible in the background on the left side.

It is recommended to always logoff from the camera if you stop working with it to prevent unauthorized access to the camera using your login data.

To safely turn off the camera, disconnect it from power and then from the network.

Notes:

Notes:

Notes:

Notes:

Your local distributor:



SANTEC

www.santec-video.com